www.alcatelonetouch.com

For more information on how to use the phone, please go to www.alcatelonetouch.com and download the complete user manual. Moreover, on the website, you can also find answers to frequently asked questions, upgrade the software via Mobile Upgrade, and so much more.

ALCATEL onetouch

smart move.

ALCATEL onetouch Hero 8

D820

ALCATEL onetouch

smart move.

# Table of Contents


**Safety and use** ..... 4

**General information** ..... 11

**1 Your device** ..... 13

1.1 Appearance illustration ..... 13

1.2 Getting started ..... 15

1.3 Home screen ..... 16

**2 Multi-window** ..... 27

**3 Text input** ..... 29

3.1 Using Onscreen Keyboard ..... 29

3.2 Text editing ..... 30

**4 Phone call, Call log and Contacts** ..... 31

4.1 Phone ..... 31

4.2 Call log ..... 39

4.3 People ..... 40

**5 Messaging, Email** ..... 46

5.1 Messaging ..... 46

5.2 Gmail/Email ..... 54

5.3 Hangouts ..... 60

**6 Calendar & Time** ..... 63

6.1 Calendar ..... 63

6.2 Time ..... 65

**7 Getting connected** ..... 67

7.1 Connecting to the Internet ..... 67

7.2 Browser ..... 70

7.3 Connecting to Bluetooth devices ..... 77

7.4 Connecting to a computer ..... 78

7.5 Sharing your tablet's mobile data connection ..... 79

7.6 Connecting to virtual private networks ..... 80

7.7 Connecting to TV using Peel Smart Remote ..... 82

7.8 Configuring Internet (SIP) calling ..... 82

**8 Google Play Store** ..... 84

8.1 Locate the item you want to download and install ..... 84

8.2 Download and install ..... 85

8.3 Manage your downloads ..... 87

**9 Multimedia applications** ..... 89

9.1 Camera ..... 89

9.2 Gallery ..... 93

9.3 YouTube ..... 95

9.4 Music ..... 96

9.5 Video Player ..... 98

**10 Google Maps** ..... 99

10.1 Get My Location ..... 99

10.2 Search for a location ..... 100

10.3 Star a location ..... 101

10.4 Get driving, public transportation or walking directions ..... 102

10.5 Arrangement of Layers ..... 103

**11 Others** ..... 104

11.1 Calculator ..... 104

11.2 File Manager ..... 105

11.3 Sound Recorder ..... 106

11.4 Radio ..... 106

11.5 Setup Wizard ..... 108

11.6 Alcatel Help ..... 108

11.7 Other applications ..... 108

**12 Settings ..... 109**
12.1 Wireless & networks ..... 109
12.2 Device ..... 111
12.3 Personal ..... 114
12.4 Accounts ..... 119
12.5 System ..... 120
**13 Making the most of your tablet ..... 126**
13.1 Upgrade ..... 126
**14 Tablet warranty ..... 128**
**15 Accessories ..... 130**
**16 Troubleshooting ..... 131**
**17 Specifications ..... 136**

www.sar-tick.com

This product meets applicable national SAR limits of 2.0W/kg. The specific maximum SAR values can be found on page 7 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



# Safety and use.....

We recommend that you read this chapter carefully before using your device. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

## • TRAFFIC SAFETY:

Given that studies show that using a device while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their device when the vehicle is not parked.

When driving, do not use your device and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your device emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your device on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from RF energy.

## • CONDITIONS OF USE:

You are advised to switch off the device from time to time to optimise its performance.

Switch the device off before boarding an aircraft.

Switch the device off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile devices can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the device off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the device is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the device, you should hold it against the ear on the opposite side to the device, if any.

Do not let children use the device and/or play with the device and accessories without supervision.

Please note that your device is a unibody device, the battery is not removable. Do not attempt to disassemble your device. If you disassemble your device the warranty will not apply. Also disassembling the device may damage the battery, and may cause leakage of substances that could create an allergic reaction.

Always handle your device with care and keep it in a clean and dust-free place.
Do not allow your device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.
At over 55°C the legibility of the device's display may be impaired, though this is temporary and not serious.
Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your device for emergency calls.
Do not open, dismantle or attempt to repair your device yourself.
Do not drop, throw or bend your device.
Do not use the device if the glass made screen, is damaged, cracked or broken to avoid any injury.
Do not paint it.
Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your device model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.
Remember to make back-up copies or keep a written record of all important information stored in your device.
Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your device or enabling a flashing-lights feature on your device. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the devices. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:
- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



When you play games on your device, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

## PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

## • PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your device regarding taking photographs and recording sounds with your device. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your device (including the operator) disclaim any liability which may result from the improper use of the device.

## • BATTERY:

Please note your device is a unibody device, the battery is not removable. Observe the following precautions:
- Do not attempt to open the back cover,
- Do not attempt to eject, replace and open battery,
- Do not punctuate the back cover of your device,
- Do not burn or dispose of your device in household rubbish or store it at temperature above 60°C.

Device and battery as a unibody device must be disposed of in accordance with locally applicable environmental regulations.

This symbol on your device, the battery and the accessories means that these products must be taken to collection points at the end of their life:
- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**
These collection points are accessible free of charge.
All products with this sign must be brought to these collection points.
**In non European Union jurisdictions:**
Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.
**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

## • CHARGERS

Mains powered chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your device meet with the standard for safety of information technology equipment and office equipment use. They are also compliant to the ecodesign directive 2009/125/EC. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

## • RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile device models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.
THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES
Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.
The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.
Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

| **Maximum SAR for this model and conditions under which it was recorded.** | | |
|---|---|---|
| **Body-worn SAR** | LTE Band 7+Wi-Fi | 1.296 W/kg |



During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.
Body-worn SAR testing has been carried out at a separation distance of 10 mm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body.
If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the device the indicated distance away from the body.
Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the device away from the head and body during phone calls, or reduce the amount of time spent on the device.
For more information you can go to www.alcatelonetouch.com
Additional information about electromagnetic fields and public health are available on the following site: http://www.who.int/peh-emf.
Your device is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.
As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the device at least 10 mm away from the body.

## • Regulatory information

The following approvals and notices apply in specific regions as noted.

TCT Mobile

**TCT Mobile Europe SAS**
55 Avenue des Champs Pierreux,
Immeuble Le Capitole 92000 Nanterre, France
+33 1 46 52 61 00

**EC declaration of conformity / Déclaration de conformité CE**

Product / Produit : LTE 6 bands/ HSDPA/HSUPA/UMTS Tri band / GSM quad band handheld station with Bluetooth technology, WiFi, FM radio / Portatif LTE 6 bandes/ HSDPA/HSUPA/UMTS bibande / GSM quadribandes avec technologie Bluetooth, Wifi, radio FM

Product identification / *Identification du produit* : ALCATEL D820X type HERO8

*We / Nous* TCT Mobile Europe SAS
55, avenue des Champs Pierreux
92000 Nanterre
France

Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex IV of the directive. / *déclarons sous notre entière responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicables de la directive 1999/5/CE et que toutes les séries d'essais radio essentielles ont été effectuées. Procédure d'évaluation de conformité : annexe IV de la directive.*

Applied standards / *Normes appliquées* :

- Item 3.1.a ( protection of the health and of the safety of the user ) / *Article 3.1.a ( protection de la santé et de la sécurité de l'utilisateur)*
  - EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011
  - EN 50 360: 2001/A1:2012, EN 50 566: 2013, EN 62479 :2010,
- Item 3.1.b ( protection requirements with respect to electromagnetic compatibility ) / Article 3.1.b ( exigences de protection en ce qui concerne la compatibilité électromagnétique )
  - EN 301 489-1 v.1.9.2 (2011-09), EN 301 489-3 v1.6.1 (2013-08) , EN 301 489-7 v.1.3.1 (2005-11) , EN 301 489-17 v.2.2.1 (2012-09), EN 301 489-24 V1.5.1 (2010-10), EN 55013:2001 +A1:2003 + A2:2006, EN 55020:2007+ A11:2011
- Item 3.2 ( effective use of spectrum so as to avoid harmful interferences ) / *Article 3.2 ( utilisation efficace du spectre radioélectrique de façon à éviter les interférences dommageables)*
  - EN 301 511 v.9.0.2 (2003-03), EN 301 908-1 v.5.2.1 (2011-05), EN 301 908-2 v.5.2.1 (2011-07), EN 301 908-13 v.5.2.1 (2011-05), EN 300 328 v.1.8.1 (2012-06), EN 301 893 v1.7.1(2012-06), EN 300 440-1 v1.6.1 (2010-08), EN 300 440-2 v1.4.1(2010-08),

This product also conforms to the applicable requirements of following directives, / *Ce produit est en conformité avec la directive,*
- directive 2011/65/EU (RoHS - restriction of the use of certain hazardous substances)

This product can connect with a Common Mobile Phone Charger which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards suivants :)
- EN301 489-34 v1.3.1 (2012-05) or EN301 489-34 v1.4.1 (2013-05)
- EN 62684:2010

The chargers delivered with this product also conform to the applicable requirements of the directive 2009/125/EC(Energy Related Product) / Les chargeurs livrés avec ce produit sont en conformité avec la directive 2009/125/EC(écoconception des produits)

Conformity of this product with the essential requirements of the R&TTE Directive 1999/5/EC has been reviewed by the following Notified Body: / *La conformité de ce produit a été vérifiée par l'organisme de certification (notify body) suivant.*

American Certification Body, Inc.
Suite C110, Whittier Avenue 6731, 22101 McLean, Virginia, United States
Identification number: 1588

Date :2014-08-11
Signature

TCT Mobile Europe SAS
Immeuble Le Capitole
55, avenue des Champs Pierreux
92000 Nanterre
FRANCE
RCS Nanterre 440 038 222

CE 1588

TCT Mobile Europe SAS / Deputy General Manager, EMEA.

TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre France SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4652Z





## • LICENCES

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

# ALCATEL ONETOUCH D820X
# Bluetooth Declaration ID D023492

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance. 5 GHz Wi-Fi operation is for indoor use only.

Google, the Google logo, Android, the Android logo, Google Search ™, Maps™, Gmail ™, YouTube, Google Play Store, Google Latitude ™ and Hangouts ™ are trademarks of Google Inc.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License (the text will show when you touch and hold **Google legal** in **Settings\About device\Legal information**) (1).

You have purchased a product which uses the open source (http://opensource.org/) programs mtd, msdosfs, netfilter/iptables and initrd in object code and other open source programs licensed under the GNU General Public License and Apache License.

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product by TCT.

You may download the source codes from http://sourceforge.net/projects/alcatel/files/. The provision of the source code is free of charge from internet.

(1) It may not be available according to the countries.

# General information .....

- **Internet address:** www.alcatelonetouch.com
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our website.
- **Address:** Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong
- **Electronic labeling (E-label) path:** Touch settings / Regulatory &safety or input "*#07#", you can find more information about labeling[1].

On our website, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

**www.alcatelonetouch.com**

Your device is a transceiver that operates on GSM in quad-band with 850/900/1800/1900 MHz, UMTS in quad-band with 850/900/1900/2100 MHz or LTE in penta-band with B1/B3/B7/B8/B20.

CE 1588 !

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your device can be obtained through our website: www.alcatelonetouch.com.

## Protection against theft [2]

Your device is identified by an IMEI (serial number) shown on the packaging label and in the device's memory. We recommend that you note the number the first time you use your device by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your device is stolen. This number allows your device to be blocked preventing a third person from using it.

(1) It depends on countries.

(2) Contact your network operator to check service availability.



## Disclaimer

There may be certain differences between the user manual description and the device's operation, depending on the software release of your device or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively. This handset may contain materials, including applications and software in executable or source code form, which is submitted by third parties for inclusion in this handset ("Third Party Materials"). All third party materials in this handset are provided "as is", without warranty of any kind, whether express or implied, including the implied warranties of merchantability, fitness for a particular purpose or use/third party application, interoperability with other materials or applications of the purchaser and non-infringement of copyright. The purchaser undertakes that TCT Mobile has complied with all quality obligations incumbent upon it as a manufacturer of mobile devices and handsets in complying with Intellectual Property rights. TCT Mobile will at no stage be responsible for the inability or failure of the Third Party Materials to operate on this handset or in interaction with any other devices of the purchaser. To the maximum extent permitted by law, TCT Mobile disclaims all liability for any claims, demands, suits or actions, and more specifically – but not limited to – tort law actions, under any theory of liability, arising out of the use, by whatever means, or attempts to use, such Third Party Materials. Moreover, the present Third Party Materials, which are provided free of charge by TCT Mobile, may be subject to paid updates and upgrades in the future; TCT Mobile waives any responsibility regarding such additional costs, which shall be borne exclusively by the purchaser. The availability of the applications may vary depending on the countries and the operators where the handset is used; in no event shall the list of possible applications and software provided with the handsets be considered as an undertaking from TCT Mobile; it shall remain merely as information for the purchaser. Therefore, TCT Mobile shall not be held responsible for the lack of availability of one or more applications wished for by the purchaser, as its availability depends on the country and the operator of the purchaser. TCT mobile reserves the right at any time to add or remove Third Party Materials from its handsets without prior notice; in no event shall TCT Mobile be held responsible by the purchaser for any consequences that such removal may have on the purchaser regarding the use or attempt to use such applications and Third Party Materials.

# Your device .....

## 1.1 Appearance illustration

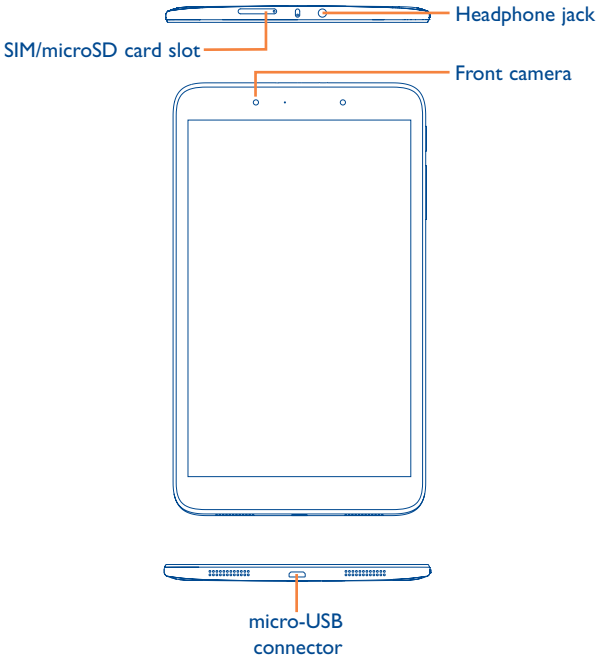




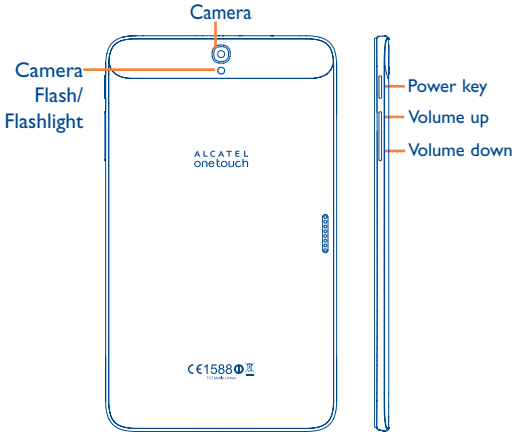


### Inserting the microSD card

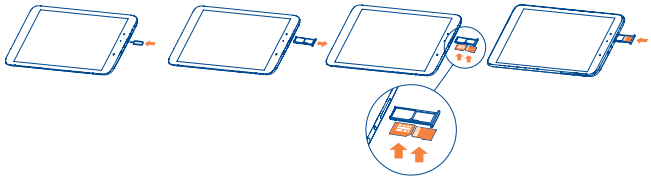

## 1.2 Getting started

### 1.2.1 Power on your tablet

Hold down the **Power** key until the tablet powers on, unlock your tablet (Slide, PIN, Password, Pattern, Face unlock or Voice unlock) if necessary and confirm. The Home screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your tablet. Store this information in a safe place when not in use.

**Set up your tablet for the first time**

The first time you power on the tablet, you should set the following options:

- Touch **Get started**..., then select the tablet's language.
- The device will search for service by itself. The process of activation will take a few minutes
- Select your input keyboard, then touch **Next**.
- Select mobile data connection, then touch **Next**.
- Set your date and timezone, you can also choose **Automatic time zone**, then touch **Next**.
- **Setup your Google account**: Touch **Set up now**. If you have a Google Account, touch **Sign in**, then enter your user name and password. If you forget your password, you can go to http://www.google.com/ to retrieve it. Touch **Next** to skip to the next step.
- Select your **Backup & reset** option, then touch **Next**.
- Select your location mode and touch **Next**.
- The Setup complete screen will display, touch **Finish** to confirm.

When the tablet is powered on, you can connect to a Wi-Fi network, without a SIM card inserted (refer to section "**7.1.2 Wi-Fi**"), to sign into your Google account and to use some features.



### 1.2.2 Power off your tablet

Hold down the **Power** key until the pop-up menu appears, select **Power off** to confirm.

## 1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the **Home** key to switch to Home screen.

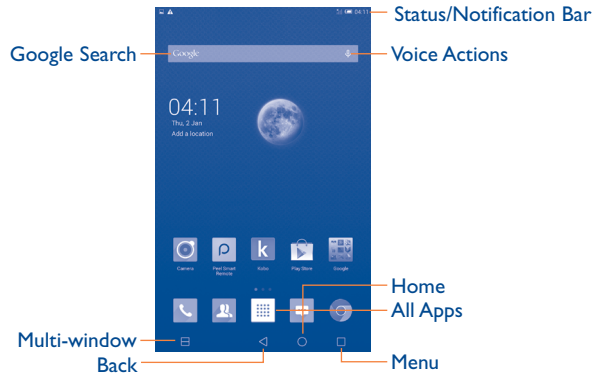


Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. The white short line at the lower part of the screen indicates which screen you are viewing.

### 1.3.1 Using the touchscreen

**Touch**

To access an application, touch it with your finger.

**Touch and Hold**

Touch and hold the home screen to access the available options for setting the wallpaper.

**Drag**

Place your finger on any item to drag it to another location.

**Slide/Swipe**

Slide the screen to scroll up and down the applications, images, web pages… at your convenience.

**Flick**

Similar to swiping, but flicking makes it move quicker.

**Pinch/Spread**

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.



**Rotate**

Automatically change the screen orientation from portrait to landscape by turning the device sideways to have a better view.

### 1.3.2 Gestures

You can go to Settings\Gestures to enable the following functions:

- When your device is in sleep mode: If no screen lock is set, double tap to access the Home screen. If screen lock is set, double tap to light up the tablet and input your unlock instruction.
- When your tablet shows the Home or locked screens: double tap on the main screen to turn off display and put it into sleep mode.
- Draw "C" on the sleep screen to enter Camera mode quickly.
- Draw "M" on the sleep screen to enter Music mode quickly.
- Mute incoming calls by turning the device over.
- When an alarm is on, turn the device over to stop or snooze the alarm.
- Shake the device to switch to the next song.

### 1.3.3 Status bar

From status bar, you can view both device status and notification information.

## Status icons

| | | | |
|---|---|---|---|
| | GPRS connected | | No signal (gray) |
| | GPRS in use | | Roaming |
| | EDGE connected | | No SIM card inserted |
| | EDGE in use | | Signal strength (blue) |
| | 3G connected | | Vibrate mode |
| | 3G in use | | Ringer is silenced |
| | HSPA (3G+) connected | | Tablet microphone is mute |
| | HSPA (3G+) in use | | Battery is very low |
| | Connected to a Wi-Fi network | | Battery is low |
| | Bluetooth is on | | Battery is partially drained |
| | Connected to a Bluetooth device | | Battery is full |
| | Airplane mode | | Battery is charging |
| | Alarm is set | | Headset connected |



## Notification icons

| | | | |
|---|---|---|---|
| | New text or multimedia message | | Missed call |
| | Problem with SMS or MMS delivery | | Call on hold |
| | New Hangouts message | | Call forwarding is on |
| | New voicemail | | Call in progress |
| | Upcoming event | | Uploading data |
| | Data is synchronizing | | Downloading data |
| | Song is playing | | Select input method |
| | Screenshot captured | | An open Wi-Fi network is available |
| | USB tethering is on | | Tablet is connected via USB cable |
| | Portable Wi-Fi hotspot is on |  | Radio is on |

Touch and drag down the Status bar to open the Quick setting panel or Notification panel. Touch and drag up to close it.

## Quick setting panel

Touch and drag down the Status bar to open Quick setting panel, where you may enable or disable functions or change modes by touching the icons.

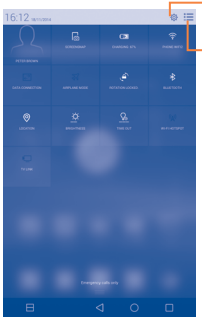

Touch to access **Settings**, where you may set more items

Touch to switch to the notification panel



## Notification panel

When there are notifications, touch and drag down the Status bar to open the Notification panel to read the detailed information.

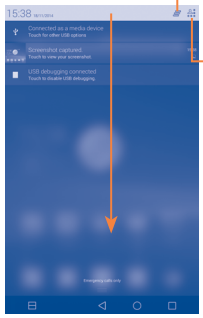

Touch to clear all event–based notifications (other ongoing notifications will remain)

Touch to switch to the quick setting panel

## 1.3.4 Search bar

The tablet provides a Search function which can be used to locate information within applications, the tablet or the web.

### ❶ Search by text

- Touch Search bar from the Home screen.
- Enter the text/phrase you want to search for.
- Touch on the keyboard if you want to search on the web.

### ❷ Search by voice

- Touch from Search bar to display a dialog screen.
- Speak the word/phrase you want to search for.A list of search results will display for you to select from.



## 1.3.5 Lock/Unlock your screen

To protect your tablet and privacy, you can lock the tablet screen by choosing slide or creating a pattern, PIN or password, etc.

**To create a screen unlock pattern** (refer to section "Screen lock" for detailed settings)

- Drag down the notification panel and touch and then the settings icon to enter **Settings**, then touch **Lock settings\Select screen lock\Pattern**.
- Draw your own pattern.

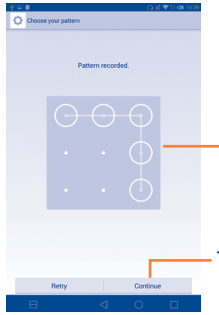


Draw your unlock pattern

Touch to confirm by drawing pattern again

**To create a screen unlock PIN/Password**

- Touch **Settings\Lock settings\Select screen lock\PIN** or **Password.**
- Set your PIN or password.
- To unlock your device with your face or voice, Touch Lock settings\Select screen lock\Face unlock or Voice unlock.
- Follow the prompted instructions to set up your face or voice unlock settings.

### To lock tablet screen

Press the **Power** key once to lock the screen.

### To unlock tablet screen

Press the power key once to light up the screen, draw the unlock pattern you have created or enter PIN or password, etc. to unlock the screen.

If you have chosen **Slide** as the screen lock, touch and drag the screen rightward to unlock the screen. Touch and drag the screen leftward to open camera.

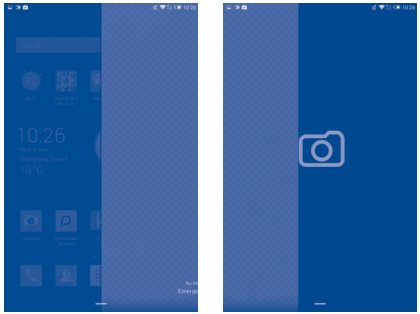

## 1.3.6 Personalize your Home screen

### Add

You may touch and hold a folder, an application or a widget to activate the Move mode, and drag the item to any Home screen as you prefer.



### Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the Favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

### Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of **Remove**, and release after the item turns red.

### Create folders

To improve the organization of items (shortcuts or applications) on the Home screen, you can add them to a folder by stacking one item on top of another.

### Wallpaper customization

Touch Menu key then touch Wallpaper to customize wallpaper.

## 1.3.7 Volume adjustment

### Using volume key

Press **Volume** key to adjust the volume. To activate the vibrate mode, press the **Volume down** key until the tablet vibrates. Press the **Volume down** key once more to activate the silent mode.

### Using Settings menu

Drag down the notification panel and touch and then the settings icon to enter **Settings**, then touch **Sound**, you can set the volume of calls renting, notification, system and etc. to your preference.

# 2 Multi-window.....

Touch to enable the multi-window function. With this function you can view multiple windows on your home screen.

Touch to unfold the APPs. Select an icon from the list to start an APP on the home screen. You can also drag the APP window to the place you prefer.

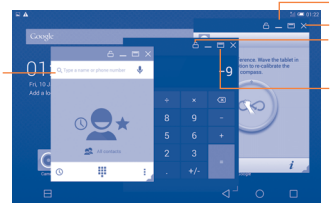
Touch an APP to bring it to the front.
Touch to minimize the window.
Touch to close the APP.
Touch to keep the window in the front.
Touch to maximize the window.



The multi-window function can also be opened in a different way when an APP is open.

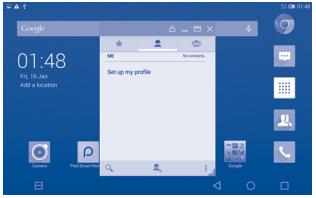

# 3 Text input .....

## 3.1 Using Onscreen Keyboard

### Onscreen Keyboard settings

From the home screen, select **Settings\Language & input** and tap the Settings icon next to **Android keyboard.** A series of settings will be available here.

### Adjust the Onscreen Keyboard orientation

Turn the device sideways or upright to adjust the Onscreen Keyboard orientation. You can also adjust it by touching **AUTO ROTATE** from the quick setting panel.

### 3.1.1 Android keyboard

Touch to switch between "abc/Abc" mode; Touch & hold to switch between "abc/ABC" mode.
Touch to switch to symbol and numeric keyboard.
Touch to select emoticons.
Touch & hold to show input options; when Wi-Fi or data connection is on, touch to enter voice input.



## 3.2 Text editing

You can edit the text you have entered.

- Touch and hold the text you would like to edit.
- Drag the tabs to change the highlighted selection.
- The following options will appear: **Select all** , **Cut** , **Copy** and **Paste** .
- Touch the icon to confirm.

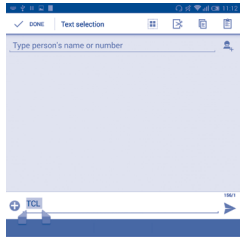


### You can also insert new text

- Touch where you want to type, or touch and hold a blank space, the cursor will blink and the tab will show. Drag the tab to move the cursor.
- If you have selected any text, touch the tab to show **PASTE and REPLACE...** icon which allows you to paste or replace with any text you have previously copied.

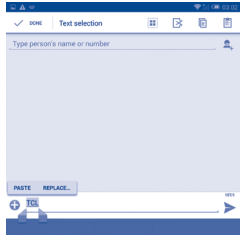

# 4 Phone call, Call log and Contacts

## 4.1 Phone

### 4.1.1 Placing a call

You can easily launch a call using **Phone**. Touch on the home screen to access **Phone** application.

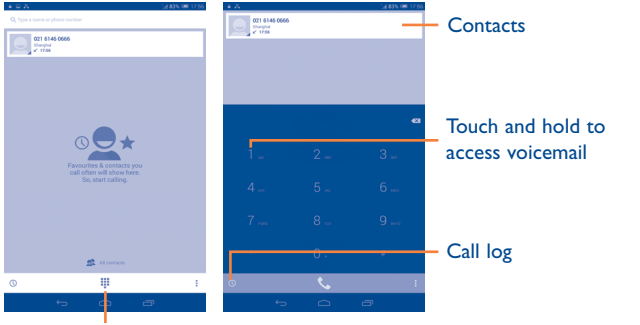


Enter the desired number from the keyboard directly or select a contact from **People** or **Call log** by sliding or touching tabs, then touch to place the call.

The number you entered can be saved to **People** by touching **Add to Contacts.**

To hang up a call, touch or the **Power** key(1).

(1) Make sure **Power key ends call** is marked in call settings.



#### International call

To dial an international call, touch and hold to enter "+", then enter the international country prefix followed by the full phone number and finally touch .

#### Emergency call

If your tablet has network coverage, dial emergency number and touch to make an emergency call. This works even without a SIM card and without typing the PIN code.

### 4.1.2 Answering or rejecting a call

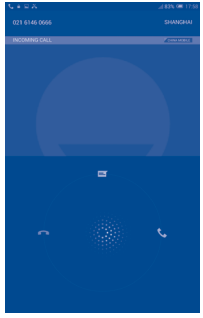

When you receive a call, slide the icon .

- Slide rightward to answer;
- Slide leftward to reject;
- Slide upward to reject the call by sending a preset message.

To mute the ringtone volume of an incoming call, press the **Volume up/down** key or turn the tablet face down if **Turn over to mute** is activated. To activate, touch **Settings\Gestures\Turn over to mute**.

### 4.1.3 Calling your voicemail

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.

To access your voicemail, touch and hold 1 on **Phone** tab.

To set your voicemail number, touch the **Menu** key and select **Settings\ Call settings\Voice call\Voicemail.**

If you receive a voicemail, a voicemail icon appears on the Status bar. Open the Notification panel, touch **New voicemail**.

### 4.1.4 During a call

To adjust the volume during a call, press the **Volume up/down** key.

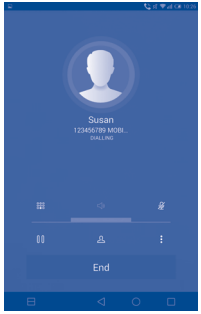




Touch to hold the current call. Touch this icon again to retrieve the call.

Touch to display Dialpad.

Touch to add a call.

Touch to mute the current call. Touch this icon again to unmute the call.

Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.

Touch to start recording and add call.

### 4.1.5 Managing multiple calls

With this tablet you can handle multiple calls at the same time.

**Swap calls**

When you accept two calls, touch icon , you can now switch between two lines. The current call is put on hold and you have joined in the other call.

**Conference calls** [1]

You can set up a conference call.

- Place a call to the first participant of the conference call.
- Touch icon .
- Enter the phone number of the person you want to add to conference and touch icon . You can also add participants from **People** or **Call log**.
- Touch to end the conference call and disconnect all callers.

[1] Depending on your network operator.



### 4.1.6 Call settings

Touch the **Menu** key and select **Settings** from Dial screen, the following options are available:

**Voice call**

- **Voicemail**

| | |
|---|---|
| **Service** | Opens a dialog box where you can select your carrier's voicemail service or another service. |
| **Voicemail settings** | If you are using your carrier's voicemail service, this opens a dialog box where you can enter the phone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number — for example, to add a password after the phone number. |

- **IP prefix number**

Touch to set your network operator prefix number for IP dialling.

- **Call forwarding**

Touch to configure how your calls are forwarded when you are busy, unanswered or unreachable.

- **Additional settings**

| | |
|---|---|
| **Caller ID** | You are prompt to use default operator settings to display your phone number in outgoing calls. |
| **Call waiting** | Mark the checkbox to notify you of a new incoming call. |
| **Call waiting status** | Check the call waiting status of your tablet. |

### Video call [1]

- **Local video replacement** You can pick a picture from your collection to display when Camera is unreachable.
- **Display peer video** Select to display picture for replacing peer video when it is unavailable.
- **Peer video replacement** Set a picture to display when peer video is unavailable.
- **Enable back camera** Select to enable switching cameras.
- **Peer video larger than local video** Select to make peer video bigger than local video.
- **Auto drop back** Select to drop back to voice call connecting automatically.
- **Outgoing video call** Touch to display local video when you place a call.
- **Incoming video call** Touch to display local video when receiving an incoming call.
- **Call forwarding** Touch to do video call forwarding settings.
- **Additional settings** Touch to make call waiting settings.

[1] Depending on your model.



### Internet call

For more information of Internet call, please refer to section **7.8 Configuring Internet (SIP) calling.**

### Other settings

- **Fixed Dialing Numbers**

Fixed Dialing Number (FDN) is a service mode of SIM, where outgoing calls are restricted to a set of phone numbers. These numbers are added to the FDN list. The most common practical application of FDN is for parents to restrict the phone numbers which their children can dial.

For security reasons, you'll be prompted to enable FDN by entering SIM PIN2 which is usually acquired from your service provider or SIM maker.

- **Minute reminder**

Mark the checkbox to enable minute reminder at 50s of every minute during a call.

- **Power key ends call**

Mark the checkbox to end a call by pressing the **Power** key.

- **TYY mode**

Mark the checkbox to enable, disable or change the TYY mode.

- **Quick responses**

Touch to edit quick responses which will be used when you reject a call with messages.

- **International dialing assist**

Mark the checkbox to activate.

## 4.2 Call log

You can access your call memory by touching from the Dial screen. Touch **Call** to place a call directly. There are three kinds of calls in Call log:

- Missed calls
- Outgoing calls
- Incoming calls

Touch icons on top of call logs to change among different kinds.

Touch a contact or number to view information or perform further operations.

You can view detailed information of a call, launch a new call or send messages to a contact or number, or add numbers to **People** (only available for unsaved phone numbers), etc.

Touch the photo to open the Quick Contact panel.

To clear the entire call memory, touch and select **Delete**, or touch .

To do any modification with number before call, touch and select **Edit number before call**.



## 4.3 People

**People** enables quick and easy access to the people you want to reach.

You can view and create contacts on your tablet and synchronize these with your Gmail contacts or other applications on the web or on your tablet.

### 4.3.1 Consult your contacts

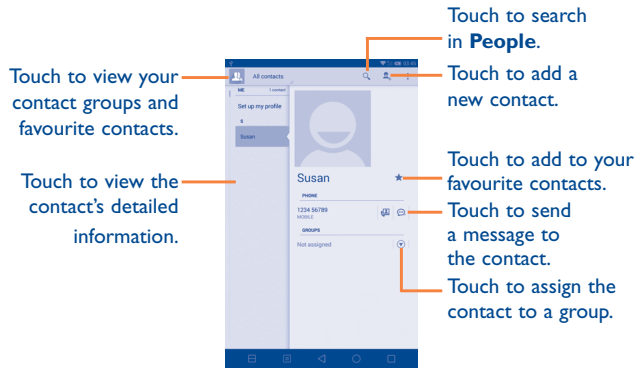
Touch to search in **People**.
Touch to view your contact groups and favourite contacts.
Touch to add a new contact.
Touch to add to your favourite contacts.
Touch to view the contact's detailed information.
Touch to send a message to the contact.
Touch to assign the contact to a group.
All contacts
Set up my profile
Susan
Susan
PHONE
1234 56789
MOBILE
GROUPS
Not assigned

Touch the **Menu** key to display contacts list option menu.

Following actions are enabled:

- **Delete contact** Select and delete unwanted contacts.
- **Share visible contacts** Share contacts with others by sending the contact's vCard to them via Bluetooth, Email, SMS,etc.
- **Contacts to display** Choose contacts to display.
- **Import/Export** Import or export contacts between tablet, SIM card, microSD card and tablet storage.
- **Accounts** Manage the synchronization settings for different accounts.
- **Settings** Set contacts' display mode.
- **Blocking incoming calls directly** Mark the checkbox to block incoming calls from the contact.
- **Add to Home screen** Add the contact to Home screen.

### 4.3.2 Managing contact groups

The contact group helps you to improve the organization of your contacts. You can add, remove and view groups in the **Group** screen.

Touch the icon to view local groups. To create a new group, touch the icon, enter the new name and touch **Done** to confirm.

### 4.3.3 Adding a contact

Touch the icon in the contact list to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.



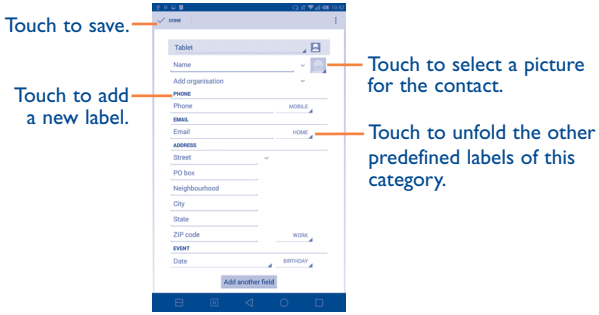


If you want to add more information, touch **Add another field** to add a new category.

When finished, touch **Done** to save.

To exit without saving, you can touch **Menu** icon and choose **Discard**.

#### Add to/remove from Favourites

To add a contact to Favourites, you can touch a contact to view details then touch ☆ to add the contact to Favourites (the star will turn grey in colour).

To remove a contact from favourites, touch the grey star ★ on contact details screen.

Only phone contacts can be added to Favourites.

### 4.3.4 Editing your contacts

To edit contact information, touch the **Menu** key on the contact details screen, then touch **Edit.** When finished, touch **Done**.

#### Set ringtone for a contact

On the contact's detail screen, touch the **Menu** key to display contacts list options menu, touch **Set ringtone**.

#### Delete a contact

To delete a contact, touch the **Menu** key and select **Delete** from contact details screen.

The contact you have deleted will also be removed from other applications on the tablet or web the next time you synchronize your tablet.

### 4.3.5 Communicating with your contacts

From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, touch the contact to enter the detail screen, then touch the number.

To send a message to a contact, touch the contact to enter the detail screen, then touch the icon on the right side of the number.

The icons available on Quick Contact panel depend on the information you have for the contact and the applications and accounts on your tablet.

### 4.3.6 Contacts importing, exporting and sharing

This tablet enables you to import or export contacts between device, SIM card, microSD card and device storage.



From Contacts screen, touch to open options menu, touch **Import/export**, to import/export contacts from/to SIM card, Tablet, Tablet storage, etc.

To import/export a single contact from/to SIM card, choose an account and target SIM card(s), select the contact you want to import/export, and touch **OK** to confirm.

To import/export all contacts from/to SIM card, choose an account and target SIM card(s) mark **Select all** and touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch a contact you want to share, touch the **Menu** key, and select **Share** from contact details screen, then select the application to perform this action.

### 4.3.7 Displaying contacts

You can configure which group of contacts, for each account you want to display in the contacts list. Touch the **Menu** key and select **Contacts to display** from contacts list screen, then you can choose contacts to display.

Touch the **Menu** key and select **Settings**, you can sort list by the Given name or Family name, as well as view contact names as Given/Family name first.

### 4.3.8 Joining/Separating contacts(1)

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, touch the **Menu** key and select **Edit**, then touch the **Menu** key again and touch **Join**.

(1) Only applicable for phone contacts.

At this time, you are required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will no longer be displayed in the Contacts list.

### 4.3.9 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your tablet.

To add an account, drag down the notification panel and touch to enter **Settings**, then touch **Add account**.

You are required to select the kind of account you are adding, like Google, Corporate, etc.

As with other account set-ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the tablet. Open the **Settings** screen, touch the account you want to delete, touch the **Menu** key and select **Remove account**, then confirm.

#### Turn on/off the sync & Auto-sync

Touch an account to enter the account screen, mark/unmark the checkbox(s) to turn on/off the account's auto-sync. When activated, all changes to information on the tablet or online will be automatically synchronized to each other.

#### Sync manually

You can also synchronize an account manually on **Accounts** screen, touch an account in the list, then touch the **Menu** key and select **Sync now**.



# 5 Messaging, Email

## 5.1 Messaging

You can create, edit and receive SMS and MMS with this tablet.
To access this feature, touch from the Home screen.

### 5.1.1 Write message

On message list screen, touch the new message icon to write text/multimedia messages.

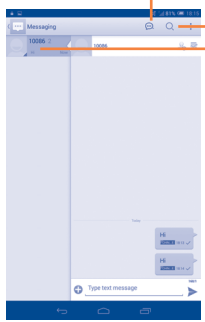


Touch to create a new message.
Touch to search in all messages.
- Touch to view the whole message thread.
- Touch and hold to **Delete thread** or **Add shortcut**.

All messages you receive or send out can be saved in device memory or SIM card. To consult the SMS messages stored in SIM card, touch from Messaging screen, then touch **Settings\Text message(SMS)\Manage SIM card messages**.

### Sending a text message

Enter the mobile phone number of the recipient or touch to add recipients, touch **Type text message** bar to enter the text of the message. When finished, touch to send the text message.

An SMS message of more than 160 characters will be charged as several SMS. A counter will appear upon the Send option of the text box to remind you how many characters are allowed to be entered in one message.

Specific letters (accent) will increase the size of the SMS, which may cause multiple SMS to be sent to your recipient.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

To send a multimedia message, enter the recipient's phone number or touch , touch **Type text message** bar to enter the text of the message, touch the **Menu** key to open the option menu, select **Add subject** to insert a subject, and touch to attach picture, video, audio and so on.

When finished, touch to send the multimedia message.



### Attach options:

| | |
|---|---|
| • **Pictures** | Access Gallery application or File manager to select a picture as attachment. |
| • **Capture picture** | Access Camera to capture a new picture for attaching. |
| • **Videos** | Access Gallery application or File manager to select a video as attachment. |
| • **Capture video** | Access Camcorder to record a new video for attaching. |
| • **Audio** | Access to select an audio file as attachment. |
| • **Record audio** | Enter Sound Recorder to record a voice message for attaching. |
| • **Slideshow** | Enter Edit slide show screen, touch **Add slide** to create a new slide, and touch currently existing slide to edit it (see following picture). Touch the **Menu** key to get more actions, like setting the slide duration, adding music, etc. |
| • **Contact** | Access **People** application to select one or more contact(s) to attach. |
| • **Calendar** | Access **Calendar** application to select one or more event(s) to attach. |
| • **Add subject** | Touch to add a subject to the message. |
| • **Insert quick text** | Access quick text library, select one or more quick texts to attach. |

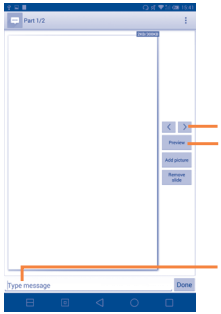


Touch to go to previous or next slide.
Touch to preview the current slide.
Touch to edit the title of this slide.

### 5.1.2 Manage messages

When receiving a message, an icon will appear on status bar as notification. Drag down the status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter message-composing screen, enter the text, then touch .

Touch and hold an SMS in message details screen. The following message options are available for selection:



- **Copy** — This option displays when the message is an SMS. Copy the current message content. You can paste it to the enter bar of the new message you are going to compose.
- **Forward** — Touch to forward the message to another recipient.
- **Delete** — Delete the current message.
- **Lock/Unlock** — Touch to lock/unlock the message so it can't/can be deleted if you reach maximum number of stored messages.
- **Add number to contact** — Touch to save this number to People.
- **View details** — Touch to view details of the message.
- **Select text** — Touch to select the message text to copy, cut, add to dictionary, etc.
- **Save message to SIM card** — This option displays when the message is an SMS. Touch to save the message to SIM card.

### 5.1.3 Adjust message settings

You can adjust a set of message settings. From Messaging application screen, touch the **Menu** key and select **Settings**.

### Text message (SMS)

- **Delivery reports** Select to request a delivery report for each text message you send.
- **Manage SIM card messages** Touch to manage messages stored on your SIM card.
- **Edit quick text** Touch to add or edit message templates.
- **SMS service center** Touch to set the service center.
- **SMS validity period** Touch to set the validity period of messages.
- **SMS storage location** Touch to select device or SIM card to store messages.

### Multimedia message (MMS)

- **Group messaging** Mark the checkbox to send a single message to multiple recipients.
- **Delivery reports** Select to request a delivery report for each multimedia message you send.
- **Read reports** Select to request a report on whether each recipient has read a multimedia message sent by you.
- **Send read report** Select to request a report on whether the multimedia message is sent out.
- **Auto-retrieve** Select to download the full MMS message (including message body and attachment) automatically to your tablet. Otherwise, download only the MMS message header.



- **Roaming auto-retrieve** Select to download the full MMS message (including message body and attachment) automatically when roaming. Otherwise, download only the MMS message header to avoid extra charges.
- **Creation mode** Touch to select MMS creation mode.
- **Maximum message size** Select to edit the message size, but it should not be more than 300KB.
- **Priority** Touch to set the priority of MMS.

### Notifications

- **Notifications** Select to display message notifications in status bar.
- **Mute** Touch to mute or select the time interval of notification sound.
- **Select ringtone** Touch to select a ringtone as a new message notification tone.

**General**

- **Chat wallpaper** — Touch to select wallpaper for message background.
- **Message font size** — Touch to select message font size.
- **Show email address** — Mark the checkbox to include email address in contact results.
- **Delete old messages** — Select to delete old messages when the maximum number of stored messages is reached.
- **Text message limit** — Touch to set the number of text messages to be saved per conversation.
- **Multimedia message limit** — Touch to set the number of multimedia messages to be saved per conversation.
- **Cell broadcast** — Touch to choose a SIM card and configure cell.
- **Enable CB ringtone** — Mark the checkbox to enable CB ringtone.
- **Select CB ringtone** — Touch to select a ringtone for cell broadcast messages.
- **Cell broadcast** — Touch to choose a SIM card and configure cell.
- **Enable WAP PUSH** — Mark the checkbox to enable to receive WAP PUSH.



## 5.2 Gmail/Email

The first time you set up your tablet, you can select to use an existing Gmail or to create a new Email account.

### 5.2.1 Gmail

As Google's web-based email service, Gmail is configured when you first set up your tablet. Gmail on your tablet can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email account, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels instead of folders.

**To access Gmail**

Gmail displays messages and conversations from one single Gmail account at a time, if you own more than one account, you can add a new one by touching the **Menu** key and selecting **Settings** from Home screen, then touch **ADD ACCOUNT**. When finished, you can switch accounts by touching the account name from Inbox screen, and touch the account you want to view.

**To create and send emails**

- Touch the icon from Inbox screen.
- Enter recipient(s)'s email address in **To** field, and if necessary, touch **+ CC/BCC** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch the **Menu** key and select **Attach file** or touch the zip icon next to the Subject row to add an attachment.
- Finally, touch the icon to send.
- If you do not want to send the mail out right away, you can touch the **Menu** key and select **Save draft** or touch **Back** key to save a copy. To view the draft, touch the icon , then select **Drafts**.

If you do not want to send or save the mail, you can touch the **Menu** key and then select **Discard**.

To add a signature to emails, touch the **Menu** key and select **Settings** from inbox screen, choose an account, then touch **Signature**.

### To receive and read your emails

When a new email arrives, you will be notified by a ringtone or vibration, and an icon will appear on Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

You can search for an email by sender, receiver, subject, etc.

- Touch the icon from Inbox screen.
- Enter the keyword you want to search for in the searching box and touch in the soft keyboard.

### To reply or forward emails

- **Reply** — When viewing an email, touch to reply the sender of this mail.
- **Reply all** — Touch and select "**Reply all**" to send message to all people in a mail loop.
- **Forward** — Touch to forward the received mail to other people.
- **Favourite** — Touch ☆ to assign a star and add the mail to the favourite.



### Managing Gmails by Labels

To conveniently manage conversations and messages, you can organize them using a Label.

To view conversations by labels when viewing your inbox or another conversation list, touch the icon , then touch a label to view a list of conversations with that label.

To manage labels, touch **Menu** key and select Manage **labels.**

**Mark the checkbox to select email to activate batch mode, and generate the following options:**

- Touch to archive the email message. To display the archived messages, you can touch in Inbox screen then touch **All mail**.
- Touch to delete the email message.
- Touch to mark an email message as read or unread.
- Touch to move the email to another labeled folder.
- **Change labels** — Touch to add or change the label of the email message or conversation.
- **Mark as (not) important** — To mark the email as important or not important.
- **Mute** — To mute the entire conversation. When muted, new mails related to this conversation will not be displayed in **Inbox**, but archived.
- **Report spam** — To report the email message/conversation as spam.
- **Report phishing** — To report the email message/conversation as phishing.

## Gmail settings

To manage Gmail settings, touch the **Menu** key and select **Settings** in Inbox screen.

## General settings

- **Confirm before deleting** Mark the checkbox to confirm before deleting emails.
- **Confirm before archiving** Mark the checkbox to confirm before archiving emails.
- **Confirm before sending** Mark the checkbox to confirm before sending emails.
- **Reply all** Mark the checkbox to make the default responding to messages.
- **Auto-fit messages** Mark the checkbox to zoom in/out the messages to fit the screen.
- **Auto-advance** Touch to select which screen to show after you delete or archive a conversation.
- **Sender image** Mark the checkbox to show beside name in conversation list.
- **Archive & delete actions** Touch to change the archive and delete actions.
- **Swipe to archive** Mark the checkbox to enable archive the mail by swiping in the conversation list.



Touch an account, the following settings will show:

- **Inbox type** To set this inbox as the default one or priority one.
- **Inbox catergories** Touch to set the inbox catergories.
- **Notifications** Select to activate notification when a new email arrives.
- **Inbox sound** Touch to set Sound, Vibrate and Notify once.
- **Signature** To add a signature text to the end of each mail you send.
- **Vacation responder** Touch to set the automatic respond during preset vacation period.
- **Sync Gmail** Touch to turn on/off Gmail sync.
- **Days of mail to sync** Touch to set the duration of days for mail sync.
- **Manage labels** Touch to open the Label screen, where you can manage synchronization and notifications.
- **Download attachments** Mark the checkbox to auto download attachments to recent messages via Wi-Fi.
- **Images** Touch to show or hide the images.

### 5.2.2 Email

Besides your Gmail account, you can also set up external POP3 or IMAP email accounts in your tablet.

To access this function, touch **Email** from Home screen.

An email wizard will guide you through the steps to set up an email account.

- Enter the email address and password of the account you want to set up.
- Touch **Next**. If the account you entered is not provided by your service provider in the tablet, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- To add another email account, you can touch **Menu** key and **Settings**. Touch **Add account** to create.

**To create and send emails**

- Touch the icon from Inbox screen.
- Enter recipient(s) email address(es) in **To** field.
- If necessary, touch **+ CC/BCC** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch **Menu** key , touch **Attach file** to add an attachment.
- Finally, touch to send.
- If you do not want to send the mail right away, you can touch **Menu** key and **Save draft** or touch **Back** key to save a copy.



## 5.3 Hangouts

Google's instant messaging service, Google Hangouts, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch Application tab from the Home screen, then touch **Hangouts**. All friends added by using Google Hangouts from the web or tablet will be displayed in your friends list.

### 5.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then enter your message and finally touch .

You can invite other friends to join in a group chat by touching key then selecting the friend you want to add.

### 5.3.2 To add a new friend

From Friends list, touch the icon to add a new friend.

Enter the name, email, number or Circle of the friend you want to add, and if the friend is not yet on Hangouts, the system will require to send invite by telling the friend via SMS or Gmail. A notification with this invitation will be showed in your friend' messaging or Gmail.

If your friends invite you to do video talk or they send you message in the first time, you could select Decline or Reply in response by touching **Menu** key and Hangout requests.

### 5.3.3 To start and close a chat

Touch one friend from friends list, you could send messages to your friends or have a video call;

After you join Google+, you could send pictures to everyone in the Google Hangouts.

When you want to end a chat, touch back key from Chatting screen directly.

If you want to sign out, touch **Menu** key and **Settings\Sign out**.

### 5.3.4 To manage your friends

Besides adding new friends to your friends list, the following actions are available for your choice:

- **To view all friends** By default, all your friends are displayed in Friends list. Touch your friend could start the conversation directly. Touch and hold the friend to activate archive and delete.



### 5.3.5 Settings

A series of settings are available for your selection by touching **Menu** key and **Settings** from Friends list screen, and choose an account.

- **Profile photo** Touch to set or change your Google + profile photo.
- **Share your status** Touch to set the hangouts status with friends.
- **Hangouts messages & invites** Mark the checkbox to activate the notification type when receiving Hangouts requests.
- **Video Calls** Touch to set the notification type when receiving a video call.
- **Hidden contacts** Touch to view hidden people.
- **Sign out** Touch to remove your accounts.
- **Improve Hangout** Mark the checkbox to report usage data to help improve Hangouts.

# 6 Calendar & Time.....

## 6.1 Calendar .....

Use Calendar to keep track of important meetings, appointments, etc.

### 6.1.1 Multimode view

You can display the Calendar in weekly, monthly, yearly or agenda view.

Touch the Month/Week/Agenda label on the bottom of the screen to change your Calendar view, Touch the icon to return to Today's view.

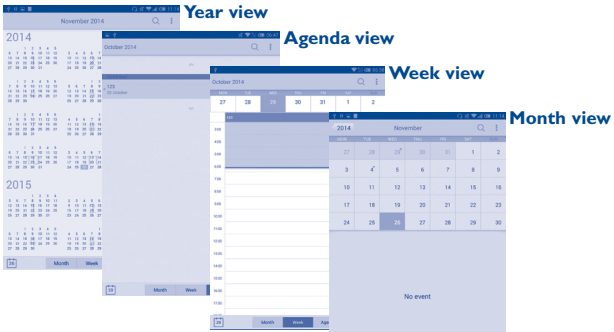


In Agenda or Week view touch an event to view its details.

Touch a day in Month view to open that day's events.



### 6.1.2 To create new events

You can add new events from any Calendar view.

- Touch the icon to access new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select **All day**.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. The guests will receive an invitation from Calendar and Email.
- When finished, touch **DONE** from the top of the screen.

To quickly create an event from Week view screen, touch and hold an empty spot or an event to open Option menu, then touch **New event** to enter the event details screen of the time you have previously selected. Or you can also touch the empty spot to select the target area which will turn blue, and tap again to create the new event.

### 6.1.3 To delete or edit an event

To share, delete or edit an event, touch the event to enter details screen, touch the icon to share the event to other people by Bluetooth, Email and messaging, etc., touch the icon to edit the event, and touch the icon to delete, you can also assign a color to specific event by touching the icon .

### 6.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon will appear on Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open the notification panel, touch event name to view Calendar notification list.

Touch **Snooze** to turn off all event reminders for 5 minutes.

Touch **Back** key to keep the reminders pending on the status bar and the notification panel.

Important options by touching the **Menu** key from Calendar main screen:

- **Refresh** To refresh the calendar
- **Search** To search in the calendar
- **Calendars to display** To show or hide, remove or add calendars
- **Settings** To make a series of Calendar settings
- **Clear events** To clear the selected events
- **Go to** To jump to the date you set

## 6.2 Time

**Time** application includes four applications – **World clock**, **Alarm**, **Timer** and **Countdown**.

Touch **Alarm** to add or set an alarm.



### 6.2.1 To set an alarm

From **Time** screen, touch to enter **Alarm** screen, touch to add a new alarm. Following options will show:

- **Label** Touch to set a name for the alarm
- **Repeat** Touch to select days you want alarm to work
- **Ringtone** Touch to select a ringtone for the alarm
- **Time** Scroll to set time.

When finished, touch **OK** to confirm.

Touch and hold on a currently existing alarm and touch **Delete alarm** to delete the selected alarm.

### 6.2.2 To adjust alarm settings

Touch Menu icon from **Alarm** screen. The following options can now be adjusted:

- **Alarm in silent mode** Select to play alarm with sound or vibration even when the tablet is in Silent mode
- **Snooze duration** Touch to set temporary turn off time of an alarm
- **Volume buttons** Touch to set side **Volume up/down** key behaviors when alarm sounds: **None**, **Snooze** or **Dismiss**
- **Turn over to activate** Touch to choose the status **Snooze** or **Dismiss**. Touch the switch to turn on/off snoozing or dismissing the alarm by turning over the tablet

# 7 Getting connected.....

To connect to the internet with this tablet, you can use GPRS/EDGE/WCDMA/LTE networks or Wi-Fi, whichever is most convenient.

## 7.1 Connecting to the Internet

### 7.1.1 GPRS/EDGE/WCDMA/LTE

The first time you turn on your tablet with SIM card inserted, it will automatically configure network service: GPRS, EDGE WCDMA or LTE. If the network is not connected, you can touch on quick setting panel.

To check the network connection you are using, then touch **Settings\More...\Mobile networks\Access Point Names** or **Network operators.**

**To create a new access point**

A new GPRS/EDGE/WCDMA/LTE network connection can be added to your tablet with the following steps:

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\Mobile networks\Access Point Names**
- Touch **Menu** key and select **New APN**.
- Enter the required APN information.
- When finished, touch the **Menu** key and select **Save**.



**To activate/deactivate Data roaming**

When roaming, you can decide to connect/disconnect to a data service.

- Drag down notification panel and touch to access **Settings**.
- Touch **SIM management\Roaming\Data roaming.**
- Touch to select from popup options: **Disable, National Roaming only** and **All Networks**.
- When Data roaming is deactivated, you can still perform data exchange with a Wi-Fi connection (refer to "**7.1.2 Wi-Fi**").

### 7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your tablet is within range of a wireless network. Wi-Fi can be used on your tablet even without a SIM card inserted.

**To turn Wi-Fi on and connect to a wireless network**

- Touch on quick setting panel to get to **Settings**.
- Touch the switch beside Wi-Fi to turn on/off Wi-Fi.
- Touch **Wi-Fi**, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact your network operator for details). When finished, touch **Connect**.

### To activate notification when a new network is detected

When Wi-Fi is on and the network notification is activated, the Wi-Fi icon will appear on the status bar whenever the tablet detects an available wireless network within range. The following steps activate the notification function when Wi-Fi is on:

- Drag down notification panel and touch to access **Settings**.
- Touch **Wi-Fi**. Then touch the **Menu** key and select **Advanced** from Wi-Fi screen.
- Mark/Unmark the **Network notification** checkbox to activate/deactivate this function.

### To add a Wi-Fi network

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Drag down notification panel and touch to access **Settings**.
- Touch **Wi-Fi**, and then touch .
- Enter the name of the network and any required network information.
- Touch **Save**.

When successfully connected, your tablet will be connected automatically the next time you are within range of this network.

### To forget a Wi-Fi network

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi screen, touch & hold the name of the saved network.
- Touch **Forget network** in the dialog that opens.



## 7.2 Browser

Using Browser, you can enjoy surfing the Web.

To access this function, touch from Home screen and then touch Browser icon .

### To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch Go to confirm.

The URL bar will hide after a few seconds. To show the URL bar, you can touch and slide down the screen.

### To set homepage

- Touch the **Menu** key from Browser screen to display option menu, touch **Settings\General\Set home page**.
- Choose a page or most visited website as your homepage.
- If you choose **Other**, enter the URL of the website you want to set as your homepage, touch **OK** to confirm.

### 7.2.1 Viewing web pages

When opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

#### To zoom in/out of a web page

Pinch/Spread your finger on the screen to zoom out/in of the web page.

To quickly zoom into a section of a web page, double-tap on the section you want to view. To return to normal zoom level, double-tap again.

#### To find text on a web page

- Touch the **Menu** key from web page screen, then select **Find on page**.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches will be boxed.
- Touch the up or down arrow to switch to the previous or next matching items.
- When finished, you can touch or the **Back** key to close the search bar.

#### Further operations for the text on a web page

You can copy, share or search the text from a web page:

- Touch and hold the text to highlight the text.
- Move the two tabs to select the text.
- Touch to select all words in this web screen.
- Touch to copy the selected text.
- Touch to show further actions, including find, share and search on the page or the web.
- When finished, touch or the **Back** key to deactivate the mode.



**Other options:**

- **Refresh** To refresh the current page.
- **Stop** To stop opening the current page.
- **Home page** To get back to the home page you set.
- **Close** To close all tabs and exit.
- **Share page** To share the current page with your friends via various ways, like Messaging, Email, Bluetooth, etc.
- **Find on page** To input contents you want to find on the current page.
- **Request desktop site** To enable/disable computer version websites.
- **New tab** To open a new tab.
- **Page info** To check the detailed web page information.
- **Version** To see the version of browser.

Touch the icon on the left of the URL, you can view more information about the current page.

### 7.2.2 Manage links, history and downloads

#### To manage a link, phone number or address displayed on a web page

- **Link** Touch the link to open the web page.
  Touch and hold the link to open options for further operation, like open in new window, save link, copy link URL, etc.
- **Phone number** Touch to call the phone number.
- **Address** Touch to open Google Maps and locate the address.

### To view Browser history

- Touch the from Browser screen.
- Touch **Bookmarks** tab to view the bookmarks.
- Touch **History** tab to view browser history.

### To download a web application/view your downloads

Before downloading a web application, you need to enable your tablet to install web applications (touch the **Menu** key from the Home screen, touch **Settings\Security**, mark the checkbox of **Unknown sources**, finally touch **OK** to confirm).

To download an item, touch the item or the link you want to download.

To cancel a download, touch the downloaded item from the Notification panel, select the item to be cancelled, and touch to confirm.

To view items you have downloaded, touch the application **Downloaded**.

## Manage bookmarks

### To bookmark a web page

- Open the web page you want to bookmark.
- Touch the star beside the URL.
- Enter the Label and the location if needed and touch **OK** to confirm.

### To open a bookmark

- Touch the icon to enter the **Bookmarks/History** screen.
- Touch the bookmark you want to open.
- You can also touch and hold to display the options screen, then touch **Open** or **Open in new tab.**



### To edit a bookmark

- Touch the icon to enter the **Bookmarks\History** screen.
- Touch and hold the bookmark you want to edit.
- Touch **Edit bookmark**, and input your changes.
- When finished, touch **OK** to confirm.

**Touch and hold a bookmark in the bookmark list to view these additional options:**

| | |
|---|---|
| • **Add shortcut to Home** | To add a bookmark shortcut to the Home screen. |
| • **Share link** | To share the bookmark. |
| • **Copy link URL** | To copy the bookmark link. |
| • **Delete bookmark** | To delete a bookmark. |
| • **Set as homepage** | To set this page as the homepage. |

### 7.2.3 Settings

A series of settings are available for your adjustment. To access Browser settings, touch the **Menu** key from Browser screen, and select **Settings**.

**General**

| | |
|---|---|
| • **Set home page** | Touch to set homepage. |

**Privacy & security**

| | |
|---|---|
| • **Clear cache** | Touch to clear locally cached content and databases. |
| • **Clear history** | Touch to clear the browser history. |
| • **Show security warnings** | Mark the checkbox to show warning if there is a problem with a site's security. |
| • **Accept cookies** | Mark to allow sites to save and read cookie data. |

- **Clear all cookie data** Touch to clear all browser cookies.
- **Remember form data** Mark the checkbox to remember data in forms for later use.
- **Clear form data** Touch to clear all the saved form data.
- **Enable location** Mark the checkbox to allow sites to request access to your location.
- **Clear location access** Touch to clear location access for all websites.
- **Remember passwords** Mark the checkbox to save usernames and passwords for websites.
- **Clear passwords** Touch to clear all saved passwords.

### Accessibility

- **Preview** To preview the text size.
- **Text scaling** Slide to change the size of the text display.
- **Zoom on double-tap** Slide to change the magnification level when double-tapping the page.
- **Minimum font size** Slide to change the minimum font size.

### Advanced

- **Set search engine** Touch to select a search engine.
- **Open in background** Mark the checkbox to open new windows behind the current one.
- **Enable JavaScript** Mark the checkbox to enable JavaScript.
- **Enable plug-ins** Mark the checkbox to enable plug-ins.



- **Website settings** Touch to view advanced settings for individual websites.
- **Open pages in overview** Mark the checkbox to open web pages zoomed out, in an overview.
- **Auto-fit pages** Mark the checkbox to format web pages to fit the screen.
- **Block pop-up windows** Mark the checkbox to prevent pop-up windows.
- **Text encoding** Touch to select the character-encoding standard.
- **Reset to default** Touch to clear all browser data and to reset all settings to default.

### Bandwidth management

- **Search result preloading** Touch to enable/disable browser to preload search results in the background.
- **Web page preloading** Touch to enable/disable browser to preload the linked web pages in the background.
- **Load images** Mark the checkbox to display images on web pages.

### Labs

- **Quick controls** Mark the checkbox to enable quick controls and hide app and URL bars.

## 7.3 Connecting to Bluetooth devices[1]

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this function, drag down notification panel and touch to access **Settings**. Then touch **Bluetooth**, your device and other available ones will display on the screen.

### To turn on Bluetooth

- Drag down notification panel and touch to access **Settings**.
- Touch to activate/deactivate this function.

To make your tablet more recognizable, you can change your tablet name which is visible to others.

- Drag down notification panel and touch to access **Settings**.
- Touch **Bluetooth**.
- Touch the **Menu** key and select **Rename tablet**.
- Enter a name, and touch **Rename** to confirm.

### To make device visible

- Drag down notification panel and touch to access **Settings**.
- Touch **Bluetooth**.
- Touch your device to make it visible or invisible.
- Touch the **Menu** key and select **Visibility timeout** to select the visible time.

[1] You are recommended to use ALCATEL ONETOUCH Bluetooth headsets, which have been tested and proved compatible with tablet. You can go to www.alcatelonetouch.com for more information about ALCATEL ONETOUCH Bluetooth headset.



### To pair/connect your tablet with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your tablet with the Bluetooth device with which you want to exchange data.

- Drag down notification panel and touch to access **Settings**.
- Touch **Bluetooth**.
- Touch **SEARCH FOR DEVICES**.
- Touch a Bluetooth device you want to be paired with in the list.
- A dialog will popup, touch **Pair** to confirm.
- If the pairing is successful, your tablet connects to the device.

### To disconnect/unpair from a Bluetooth device

- Touch the Settings icon beside the device you want to unpair.
- Touch **Unpair** to confirm.

## 7.4 Connecting to a computer

With the USB cable, you can transfer media files and other files between microSD card/internal storage and computer.

Before using MTP or PTP you should firstly mark **USB debugging**.

- To access this function, touch **Settings\About device**, then touch **Build number** 7 times. Now you may touch **Settings\Developer options\USB debugging**.

### To connect/disconnect your tablet to/from the computer:

- Use the USB cable that came with your tablet to connect the tablet to a USB port on your computer. You will receive a notification that the USB is connected.
- If you use mass storage, touch **USB storage**, then open the Notification panel and touch **USB connected**, then touch **Mount** in the dialog that opens to confirm that you want to transfer files.
- If you use MTP or PTP, your tablet will be automatically connected.

To disconnect (from mass storage):

- Unmount the microSD card on your computer.
- Open the Notification panel and touch **Turn off**.

For the operating system Windows XP or lower, you should download and install Windows Media Player 11 on your computer from the following link: http://windows.microsoft.com/zh-CN/windows/download-windows-media-player.

To locate the data you have transferred or downloaded in the internal storage, touch **File Manager**, all data you have downloaded is stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications into your tablet, etc.

### To format a microSD card

- Drag down notification panel and touch to access **Settings**.
- Touch **Storage.**
- Touch **Erase SD card**. A screen warns you that erasing the microSD card will loose all the data on the card, touch Erase SD card if you confirm. Then touch **Erase everything**.

## 7.5 Sharing your tablet's mobile data connection

You can share your tablet's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your tablet into a portable Wi-Fi hotspot.

The functions below may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

### To share your tablet's data connection via USB

Use the USB cable that along with your tablet to connect the tablet to a USB port on your computer.

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\Tethering & portable hotspot**.



- Mark\Unmark the checkbox of **USB tethering** to activate/deactivate this function.

### To share your tablet's data connection as a portable Wi-Fi hotspot

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\Tethering & portable hotspot**.
- Touch the switch beside **Wi-Fi hotspot** to activate/deactivate this function.

### To rename or secure your portable hotspot

When Portable Wi-Fi hotspot is activated, you could change the name of your tablet's Wi-Fi network (SSID) and secure its Wi-Fi network.

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\Tethering & portable hotspot\Wi-Fi hotspot**.
- Touch **Set up Wi-Fi hotspot** to change the network SSID or set your network security.
- Touch **Save**.

## 7.6 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

### To add a VPN

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\VPN** and then touch .
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Touch **Save**.

The VPN is added to the list on the VPN settings screen.

Before adding a VPN, you should set a lock screen pattern, PIN code or password for your tablet.

### To connect/disconnect to a VPN

To connect to a VPN:

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\VPN**.
- VPNs you have added are listed; touch the VPN you want to connect with.
- In the dialog that opens, enter any requested credentials and touch **Connect**.

To disconnect:

- Open the Notification panel and touch the resulting notification for the VPN disconnection.

### To edit/delete a VPN

To edit a VPN:

- Drag down notification panel and touch to access **Settings**.
- Touch **More...\VPN**.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch **Edit profile**.
- After finished, touch **Save**.

To delete:

- Touch and hold the VPN you want to delete, in the dialog that opens, touch **Delete profile**.



## 7.7 Connecting to TV using Peel Smart Remote

With Peel Smart Remote, you can easily find and watch your favorite television programs. Peel Smart Remote will recommend new shows based on past programs you have viewed. Watch TV shows by genres, share what you are watching with your friends, and control playback, volume, or navigation with the built-in gestures.

From the **Home** screen touch , follow the on-screen instructions to set up Peel Smart Remote.

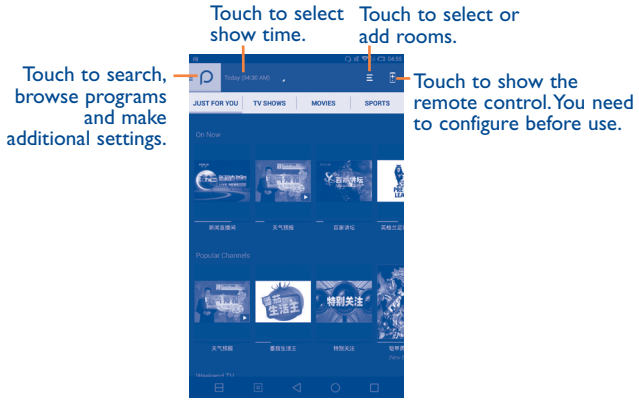
Touch to select show time.
Touch to select or add rooms.
Touch to search, browse programs and make additional settings.
Touch to show the remote control. You need to configure before use.
JUST FOR YOU
TV SHOWS
MOVIES
SPORTS
On Now
Popular Channels

## 7.8 Configuring Internet (SIP) calling

You can place/receive voice calls via the Internet when connected to a Wi-Fi network, rather than via your mobile network. You should configure a valid internet account before using this feature. Refer to section **4.1.1 Placing a call** to learn more about placing an internet call.

### To add an internet calling account

- Select **Phone** from the Home screen.
- Touch the **Menu** key and then select **Settings\Internet call\Use Internet calling.**
- Mark the checkbox to enable Internet calling.
- Touch Accounts, then touch **ADD ACCOUNT** tab.
- In the screen that opens, follow the instructions from your internet calling service provider to configure the settings for your account.
- When finished, touch **SAVE** to confirm or touch **DISCARD** to cancel.

### To edit/remove an internet calling account

To edit:

- Select **Phone** from the Home screen.
- Touch the **Menu** key and then select **Settings\Internet call\Accounts**.
- Accounts you have added are listed; touch the account you want to edit.
- Edit your chosen settings. When finished, touch **SAVE**.

To remove:

- Touch the account you want to remove.
- Touch the **Menu** key and select **Remove account**.

### To configure your tablet to receive Internet calls

Receiving Internet incoming calls is off by default to reduce power consumption.

- Select **Phone** from the Home screen.
- Touch **Settings\Internet call\Accounts\Receive incoming calls**.
- Mark/Unmark the checkbox to activate/deactivate this function.



# 8 Google Play Store(1).....

Google Play Store is an online software store, where you can download and install applications and games to your Android Powered Tablet.

To open Google Play Store:

- Touch **Google Play Store** from Home screen.
- For the first time you access Google Play Store, a screen with terms of service pops up for your attention, touch **Accept** to continue.

Touch and then select **Help** to enter Google Play Store help page for more information on this function.

## 8.1 Locate the item you want to download and install

Google Play Store home page provides several ways to find applications. It shows applications and games in categorized listings.

Touch and select **My apps** to see all your downloads.

(1) Depending on your country and operator.

Touch a category on Google Play Store screen to browse its contents. You can also select a subcategory if there is any. Within each category you can select to view items sorted by Top free, Top new free, Trending, etc

Touch the Google Play Store icon on the top left of the screen or touch **Back** key to return to the previous screen.

## 8.2 Download and install

**To download & install:**

- Navigate to the item you want to download, and select to enter the details screen from which you can read its description, overall rating or comments, view developer's information, etc.
- Touch **Install** to preview the functions and data the application can access on your tablet if you install it.
- Touch **Accept**.
- The progress of the download will show on the details screen, touch to stop downloading the item. You can also access this screen through Notification panel.
- After download and installation have finished, you will see a notification icon on the status bar.

Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you accept, you are responsible for results of using this item on your tablet.

**To open the application you have downloaded:**

- On Google Play Store screen, touch and select **My apps**.
- Touch the installed application in the list, then touch **Open**.



**To buy an application**[1]

On **Google Play Store**, some applications are labeled as free, while some of them are to be paid for before downloading and installing.

- Touch the application you want to buy.
- Touch the price on the up-right of the screen to preview the functions and data the application can access on your tablet if you install it.
- Touch **Accept** to confirm.
- When making your first purchase, you are required to input your credit card information and to log in to Google payment and billing service.
- If your account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, touch **Back** key.
- Mark the checkbox if you agree with the terms of service.
- Touch **Buy now** at the bottom of the screen.

When finished, Android downloads the application.

**To request a refund**

If you are not satisfied with the application, you can ask for a refund within 15 minutes of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Touch and select **My apps** from Google Play Store screen.
- Touch the application that you want to uninstall and refund.
- Touch **Refund** to uninstall the application and refund. If the button becomes **Uninstall**, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch **OK**.

[1] Google Paid applications may not be available to users in some countries.

## 8.3 Manage your downloads

After you downloaded and installed an application, the following further operations are available for your selection.

### View

On Google Play Store screen, touch and select **My apps**.

### Uninstall

On Google Play Store screen, touch and select **My apps**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

### Refund

On Google Play Store screen, touch and select **My apps**. Touch the application you want to uninstall for a refund, touch **Refund**, and finally touch **OK** to confirm.

### Update notification

On Google Play Store screen, touch select **Settings\Notifications** to enable update notification.

### Auto update

To auto update all installed applications, touch and select **Settings\ Auto-update apps** to enable this function.

To auto update one specific application, touch the **Menu** key from the **Apps** tab, and mark the checkbox of **Auto-update**.



### Rate and review

Open the details screen for the downloaded application, touch the stars under **Rate this app** to award and input comments, touch **Submit** to confirm.

### Flag

You can report an inappropriate application to Google Play Store by flagging it. Open the details screen for the downloaded application, scroll to the bottom and touch **Flag as inappropriate**, select the reason and finally touch **Submit**.

# 9 Multimedia applications.....

## 9.1 Camera.....

Your tablet is fitted with a Camera for taking photos and shooting videos.

Before using the Camera, please be sure to open the protective lens cover before use to avoid it affecting your picture quality.

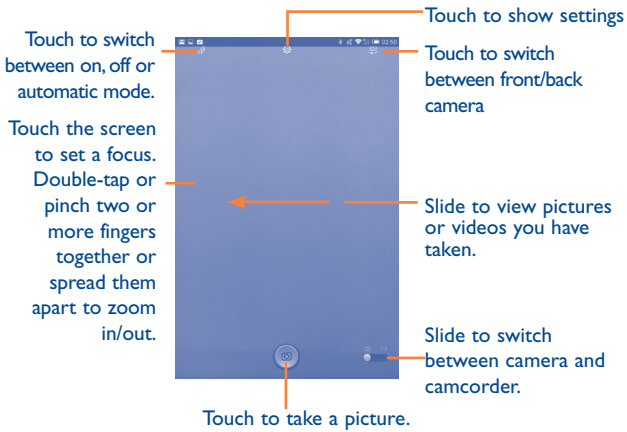
Touch to show settings
Touch to switch between on, off or automatic mode.
Touch to switch between front/back camera
Touch the screen to set a focus. Double-tap or pinch two or more fingers together or spread them apart to zoom in/out.
Slide to view pictures or videos you have taken.
Slide to switch between camera and camcorder.
Touch to take a picture.



### To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, touch the screen to focus if necessary, touch icon to take the picture which will be automatically saved.

You can also press the **Volume** key or touch and hold the viewfinder until the picture is taken.

### To shoot a video

First position the object or landscape in the viewfinder, and touch icon to start recording. Touch to pause recording, touch again or press the **Back** key to save the video.

### Further operations when viewing a picture/video you have taken

- Slide the screen rightward to access **Gallery**.
- Touch the photo, and touch the icons below to share, edit, set as wallpaper/contact photo, and view the photo as slide show.
- Touch the video, and touch the icons below to share the video you have taken.

### 9.1.1 Settings in framing mode

Before taking a photo/shooting a video, touch the icon to adjust a number of settings in framing mode.

### Back camera shooting mode

Touch the **Menu** key to access camera settings and below options will display for your choice:

- **Full screen** Touch to turn on/off full screen preview mode.
- **Shutter sound** Touch to turn on/off shutter sound.

- **Settings** — Touch to do advanced settings like GPS location info, Face detection, Picture size, Timer, ISO and Exposure.
- **Restore defaults** — Touch to restore default settings.
- **HDR** — Touch to turn on HDR (High-Dynamic Range) function. HDR photos can better reflect the visual effects people have in the real environment by synthesizing images under different exposure time. The tablet will then automatically save the original photos and HDR ones.
- **Panorama** — Touch to turn on panorama function. Press the **Shutter** button or the **Volume** key, you can also touch and hold the viewfinder to start taking panoramic photo and move the tablet towards your capture direction and overlap the two lines. Once the nine slots below the screen are filled, the tablet will automatically save the photo.
- **Night** — Touch to turn on night function. In this mode, it can better reflect the visual effects when in the night environments.
- **Sports** — Touch to turn on sports function. In this mode, it can better reflect the visual effects when in the moving environments.
- **Filter** — Touch to choose a desired effect. The screen displays a variety of effects for taking a picture.
- **QR Scan** — Touch to turn on QR code scanning function. Hold up the camera and point at the code, the scan automatically recognizes and displays the information the QR code contains.



### Front camera shooting mode

Switch to front camera, touch the **Menu** key to access camera settings and below options will display for your choice:

- **Face beauty** — Touch to turn on/off face beauty function.
- **Beauty 4** — Touch to turn on Beauty 4 function. Touch the **Shutter** button or **Volume** key to capture 4 different expressions. Once four photos taken, the photos will be automatically synthesized and saved in one picture.
- **Filter** — Touch to choose a desired effect. The screen displays a variety of effects for taking a picture.

## 9.2 Gallery

Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice.

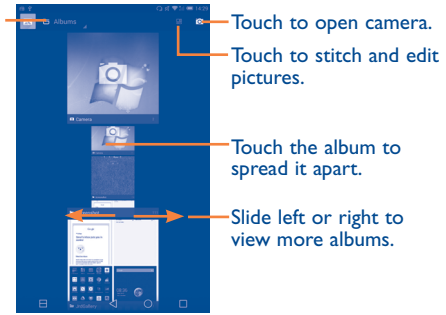
Touch to select categories: Albums, Locations, Times.
Touch to open camera.
Touch to stitch and edit pictures.
Touch the album to spread it apart.
Slide left or right to view more albums.

### To view a picture/play a video

Pictures and videos are displayed by albums in **Gallery**.

- Touch an album and all pictures or videos will spread the screen.
- Touch the picture/video directly to view or play it.
- Slide left/right to view previous or next pictures/videos.



### Working with pictures

You can work with pictures by editing them, sharing them with friends, setting them as contact photo or wallpaper, etc.

Touch **Edit** from full-screen picture view, more options will display for you to choose.

1. Touch to go back to picture display screen.
2. Touch to undo the previous modification.
3. Touch to redo the previous modification.
4. Touch to save the modified picture.

### Batch operation

Gallery provides a multi-select function, so that you can work with pictures/videos in batches.

Open the main Album window, touch the **Menu** key and select **Select item** to activate batch operation mode (you can also touch and hold one album/picture), then touch albums/pictures you want to work on. Touch icon to delete selected ones. Touch to share selected ones.

## 9.3 YouTube

YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.

As an online video service, your tablet must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most Popular, Most Discussed, Featured Videos, etc.

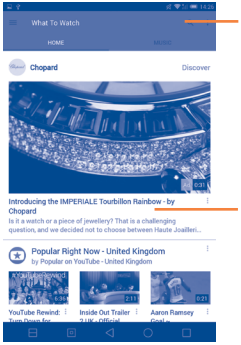
What To Watch
HOME
MUSIC
Chopard
Discover
Introducing the IMPERIALE Tourbillon Rainbow - by Chopard
Is it a watch or a piece of jewellery? That is a challenging question, and we decided not to choose between Haute Joailleri...
Popular Right Now - United Kingdom
by Popular on YouTube - United Kingdom
YouTube Rewind:
Inside Out Trailer
Aaron Ramsey

Touch to search for a video.

Touch to play the video and to show more information.

By touching the **Menu** key from YouTube by touching Settings. screen, you can set General settings and Search settings for YouTube.For details about these features, please visit the YouTube website: www.YouTube.com.



### 9.3.1 Watch videos

Touch a video to play it. In the Playing screen, you can view information and video comments, and also browse links to related videos.You can also rate, share, label as favorite, create a new playlist, etc from this screen.

To exit video playing screen, touch **Back** key to return to the video list.

## 9.4 Music

Using this menu, you can play music files stored on the microSD card or the tablet storage. Music files can be downloaded from computer to tablet using a USB cable.

You will find four categories in which all songs are classified: **Artists, Albums, Songs** and **Playlists**. Slide left and right to view all. Touch the **Menu** key and select **Shuffle all** to shuffle all songs; select **Partly shuffle** to shuffle parts of the songs; select **Sound effects** to change the sound effects.

### 9.4.1 Playing music

Touch a song to play it.

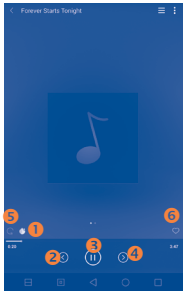


1. Touch to play the current playlist in shuffle mode (tracks are played in random order).
2. Touch to skip to the previous track in the album, playlist, or shuffle.
3. Touch to pause/resume playback.
4. Touch to skip to the next track in the album, playlist, or shuffle.
5. Touch to select repeat mode: Repeating all songs, Repeating current song, or Repeat is off.
6. Touch to add the song to the favourite.

While playing songs with Play Music, the operation of pause, play or skip is still available even if the screen is locked.

#### Adjust sound effects

Touch the **Menu** key and select **Sound effects** from Now playing screen to enable and adjust sound effects.



### 9.4.2 Working with playlists

Playlists allow you to conveniently organize all songs stored in the SD card or tablet storage.

You can create a new playlist, add a song to the list, and delete or rename a playlist.

#### To create a playlist

Touch **Recently added** from Playlists screen, touch the **Menu** key and then select **Save as playlist**, enter the name and finally touch **Save**.

#### To delete a playlist

Touch and hold a playlist to show the menu, then touch **Delete**.

#### To rename a playlist

Touch and hold a playlist to show the menu, then touch **Rename**. When finished, touch **Save** to confirm.

## 9.5 Video Player

**Video player** is a small built-in video player that lists all your videos.

Touch an item from the list to play. While playing, use Pause, or touch a point on the timeline to jump to and play from.

# 10 Google Maps .....

## 10.1 Get My Location

### 10.1.1 Choose a data source to decide My Location

Drag down notification panel and touch to access **Settings**, touch **Location**.

Select the application under **LOCATION SERVICES**, switch the button to turn on/off the location reporting service.

You can change the method to determine location by selecting **Mode**.

### 10.1.2 Open Maps and view My Location

Touch **Maps** from the main menu screen.

Touch icon on the map to view My Location.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.

To move the map, drag the map with your finger.

To zoom in and out of a map, pinch or spread your fingers, or you can also zoom in by double-tapping a location on screen.

To clear the map history, touch and **Settings**, select **Maps history**, then touch .

## 10.2 Search for a location

While viewing a map, touch the search icon to activate search function.

In the search box, enter an address, a city or a local business.

Touch the search icon to search, and in a while your search results will appear on the map as red dots.

## 10.3 Star a location

Just like bookmarking a web address on the Internet, you can star any position on the map for later use.

### 10.3.1 How to star (or unstar) a location

Touch a location on a map

Touch the address rectangle that opens

Touch the blue star under the address to save the location. (Or touch a gold star to unsave that location.)

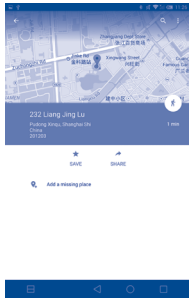


### 10.3.2 View a list of starred items

Touch the menu icon at the upper-left corner, and touch **Your places** in the box that opens.

The list of your saved places open.

Touch a location in the list to view it.



## 10.4 Get driving, public transportation or walking directions

### 10.4.1 Get suggested routes for your trip

- Touch enter bar to edit your start point by one of the following methods: entering an address, using Your Location, Choose on map, selecting a starred item, selecting an address from search history.
- Do likewise for your end point.
- To reverse directions, touch ⇅.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.

To get reverse directions for a route you've already made, simply open that route's directions window and touch ⇅. No need to enter your start point and end point again.

### 10.4.2 Preview suggested routes and decide on a route more preferable or feasible to you

You can preview each turn in your route in Navigation, Satellite, and other views.

- Touch a left or right arrow to preview the next or previous leg of your route.
- You can view turn-by-turn directions, estimated distance and possible arrival time in the direction list below. touch **Back** key to return to map view.

When selecting a more preferable or feasible route, distance and time will be the two most important factors for your evaluation. Distance and estimated time will be displayed at the top of the directions screen.

### 10.4.3 Search for locations along your route

Please refer to "**10.2 Search for a location**" for detailed information.

## 10.5 Arrangement of Layers

Layers allow you to view locations and additional information overlaid on the map. You can add multiple layers or remove only certain layers so you control exactly what information you want visible on the map at one time.

### 10.5.1 To view multiple layers

Touch icon from Maps screen. All available layers are listed (like Traffic, Satellite, etc), select one to view.

### 10.5.2 To clear the map

After you get directions or search on a map, you can clear the markers/ layers that have been drawn: touch and **Settings**, select **Maps history**, then touch .



# 11 Others.....

## 11.1 Calculator.....

With Calculator, you can solve many mathematical problems.

To access this function, touch from Home screen and then touch .

There are two calculators available: **Basic calculator** and **Scientific calculator**.

To switch between calculators, touch the **Menu** key and select **the desired calculator**.

You can also rotate the screen to switch between **Basic calculator** and **Scientific calculator** if **AUTO ROTATE** function is enabled.

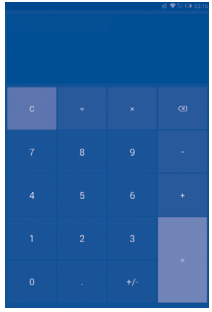

Enter a number and the arithmetic operation to be performed, enter the second number, then touch "=" to display the result. Touch to delete digits one by one.

When some numbers or operations have been entered, touch and hold the entering bar to open a menu offering these further operations:

- **Cut** To cut selected text
- **Copy** To copy selected text
- **Paste** To paste what you have previously copied to the entering bar

## 11.2 File Manager

To access this function, touch from Home screen and then touch .

**File Manager** works with both external SD card and internal storage.

**File Manager** displays all data stored on both microSD card and internal storage, including applications, media files; videos, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from PC to microSD card, you can locate the application on File Manager, then touch it to install it in your tablet.

File Manager allows you to perform and be really efficient with the following common operations: create (sub) folder, open folder/file, view, rename, move, copy, delete, play, share, etc.

(1) Option will not appear unless copy or cut operation has been made.



## 11.3 Sound Recorder

To access this function, touch from Home screen and then touch .

**Sound Recorder** allows you to record voice/sound for seconds/hours.

## 11.4 Radio

Your tablet is equipped with a radio (1). You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you turn to stations that offer Visual Radio service.

To access this function, touch from Home screen and then touch .

To use it, you must plug in your headset, which works as an antenna connected with your tablet.

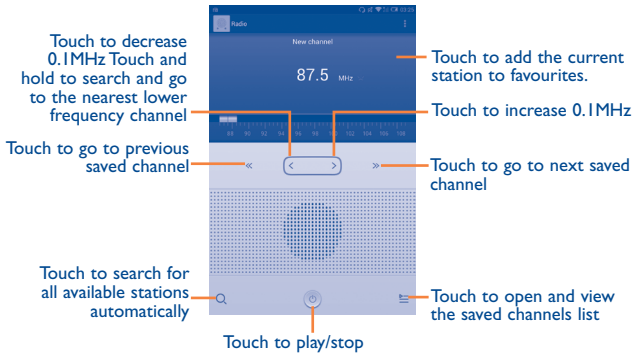
Radio
New channel
87.5 MHz
Touch to decrease 0.1MHz Touch and hold to search and go to the nearest lower frequency channel
Touch to go to previous saved channel
Touch to search for all available stations automatically
Touch to play/stop
Touch to add the current station to favourites.
Touch to increase 0.1MHz
Touch to go to next saved channel
Touch to open and view the saved channels list

(1) The quality of the radio depends on the coverage of the radio station in that particular area.

**Available options:**

- **Save channel** Save the current tuned station to the channels list.
- **Audio mode** Listen to the radio using loudspeaker or headset.
- **Delete** Delete the channel
- **Enter frequency** Enter the frequency manually.
- **RDS settings** Touch to select Channel information and Alternative frequency.
- **Record FM** Record video voice of the current channel.
- **Exit** Turn off the radio.



## 11.5 Setup Wizard

To access this function, touch from Home screen and then touch .

**Setup Wizard** helps set up your tablet in multiple ways: language, input method, mobile data connection, account setup and synchronization, etc. This will also be performed the first time you power on your tablet.

## 11.6 Alcatel Help

To access this function, touch from Home screen and then touch .

**Help Me** provides help when you have questions or need assistance when using the tablet.

## 11.7 Other applications[1]

The previous applications in this section are preinstalled on your tablet. To read a brief introduction of the preinstalled 3rd party applications, please refer to the leaflet provided with the tablet. You can also download thousands of 3rd party applications by going to Google Play Store on your tablet.

[1] Application availability depends on country and operator.

# 12 Settings.....

Drag down notification panel and touch to access **Settings**.

## 12.1 Wireless & networks

### 12.1.1 Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in range of a wireless network. The only thing you have to do is to enter the **Wi-Fi** screen and configure an access point to connect your tablet to the wireless network.

For detailed instructions on using Wi-Fi, please refer to "**7.1.2 Wi-Fi**".

### 12.1.2 Bluetooth

Bluetooth allows your tablet to exchange data (videos, images, music, etc.) in a small range with another Bluetooth supported device (tablet, computer, printer, headset, car kit, etc.).

For more information on Bluetooth, please refer to "**7.3 Connecting to Bluetooth devices**".

### 12.1.3 Data usage

To enable/disable mobile data by touching the switch .



Mark the checkbox of **Set mobile data limit**, then you can drag the limit line and the warning line according to your limitation. Your mobile data connection will be disabled when the specified limit is reached. You can also choose a data usage cycle to view the statistics and related applications of used data by your tablet.

Touch the **Menu** key, and you can view more settings related to your data usage.

Data usage is measured by your tablet, and your carrier may count differently. Please consider using a conservative limit.

### 12.1.4 Airplane mode

Mark the checkbox of **Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

### 12.1.5 VPN

A mobile virtual private network (mobile VPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. Mobile VPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspend-and-resumes their devices to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information on VPN, please refer to "**7.6 Connecting to virtual private networks**".

### 12.1.6 Tethering & portable hotspot

This function allows you to share your tablet's mobile data connection via USB or as a portable Wi-Fi access point (Please refer to "**7.5 Sharing your tablet's mobile data connection**").

### 12.1.7 Mobile networks

- **Data connection**

Touch to turn on/off data connection.

- **Preferences**

Touch to view/edit/delete preferences.

- **Access Point Names**

You can select your preferred network with this menu.

- **Network operators**

You can select a network operator.

## 12.2 Device

### 12.2.1 Gestures

Mark the checkbox to enable the following gestures: **Turn over to mute, Turn over to activate, Shake to switch music**, etc.



### 12.2.2 Sound

Use the Sound settings to configure volume and ringtones for different events and environments.

**Volume**

**Volume** settings can make user adjust the volume of ringtone, notifications, music, video and alarms, etc., or directly set the incoming calls to vibration or silence.

- **Silent mode** — Mark the checkbox to silence tablet for incoming calls.
- **Ringtone** — Slide to change the volume of the ringtone.
- **Notifications** — Slide to change the volume of the notifications.
- **System** — Slide to change the volume of the system.
- **Music, video, games and other media** — Slide to change the volume of the music, video, games and other media.
- **Alarms** — Slide to change the volume of the alarm.

**Ringtone & Notifications**

- **Phone ringtone** — Touch to set your default phone ringtone.
- **Crescendo ringtone** — Mark the checkbox to activate crescendo ringtone.
- **Notification sound** — Touch to set your default notification sound.

**System**

- **Dial pad touch tones** Mark the checkbox to enable playing tones when using dial pad.
- **Audible selection** Mark the checkbox to enable playing sound when making screen selection.
- **Screen lock sound** Mark the checkbox to enable sounds to play when locking and unlocking the screen.
- **Power on sound** Set your default power on ringtone.
- **Power off sound** Set your default shut down ringtone.

### 12.2.3 Display

- **Lock screen notifications** Mark the checkbox to show notifications on lock screen.
- **Brightness** Touch to adjust the brightness of the screen.
- **Screen module** Touch to adjust screen module.
- **Wallpaper** Touch to set the wallpaper.
- **Automatic brightness** Mark the checkbox to enable automatic brightness adjustment.
- **Sleep** Touch to set screen timeout.
- **Color Configuration** Slide to adjust the temperature and saturation.
- **Screen saver** Touch to set the screen saver.
- **Font size** Touch to set the fond size.
- **TV Link** Touch to switch on/off the TV link.



### 12.2.4 Storage

Use these settings to monitor the total and available space on your tablet and on your microSD card; to manage your microSD card.

If a warning message comes up saying that device memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files, etc.

### 12.2.5 Battery

In battery management screen you can view the battery usage data since you last connected the tablet to a power source. The screen also shows your battery status and how long it has been used since last charging. Touch one category, then you can learn its specific power consumption.

You can adjust power use via the screen brightness or screen timeout in Display screen.

### 12.2.6 Apps

You use the Applications settings to view details about the applications installed on your tablet, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and emails.

## 12.3 Personal

### 12.3.1 Security

**Encrypt tablet**

You can encrypt your accounts, settings,download apps and their data, media and other files by touching Encrypt tablet.

### Make passwords visible

Mark the checkbox to show passwords as you type.

### Device administrators

Touch to view or deactivate device administrators.

### Unknown sources

Mark the checkbox to permit installation of applications that you obtain from web sites, emails, or other locations other than Google Play Store.

To protect your tablet and personal data, download applications only from trusted sources, such as Google Play Store.

### Verify apps

Mark the checkbox to disallow or warn before installing apps which may cause harm.

### Storage type

Show the storage type of the tablet (Software only).

### Trusted credentials

Touch to display trusted CA certificates.

### Install from Memory

Touch to install encrypted certificates from the tablet memory.

### Clear credentials

Touch to remove all credentials.



## 12.3.2 Language & input

Use the Language & input settings to select the language for the text on your tablet and for configuring the onscreen keyboard. You can also configure voice input settings and the pointer speed.

### Language

Touch to select the language and the region you want.

### Spell checker

Mark the checkbox to enable the system to show suggested words.

### User dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Touch the add button (+) to add a word.

### Default

Touch to select a default input method. Touch **Configure input methods** to show all input methods. Touch the settings icon to configure a certain input method.

### Android Keyboard (AOSP)

The Android keyboard settings apply to the onscreen keyboard that is included with your tablet. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

- **Input languages**

Touch to set input language.

- **Auto-capitalization**

Mark the checkbox to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

- **Sound on keypress**

Mark the checkbox to play a brief sound each time you touch a key on the onscreen keyboard.

- **Add-on dictionaries**

Touch to view or delete the add-on dictionaries.

- **Block offensive words**

Mark the checkbox to block offensive words while typing.

- **Auto correction**

Touch to turn on/off auto correction, or you can also adjust the sensitivity of correction.

- **Show correction suggestions**

Touch to show or not the correction suggestions while typing.

- **Next word prediction**

Mark the checkbox to popup word prediction.

- **Advanced settings**

Touch to view more advanced settings for android keyboard, such as **Suggest Contact names, Key long press delay,** etc.

**Voice search**

Touch to view settings about voice search, such as Language, Speech output, etc.

**Text-to-speech output**

- **Preferred engine**

Touch to choose a preferred text-to-speech engine, touch the settings icon to show more choices for each engine.



- **Speech rate**

Touch to open a dialog where you can select how quickly you want the synthesizer to speak.

- **Listen to an example**

Touch to play a brief sample of the speech synthesizer, using your current settings.

- **Default language status**

It shows the default language status.

**Pointer speed**

Touch to open a dialog where you can change the pointer speed, touch **OK** to confirm.

### 12.3.3 Backup and reset

**Back up my data**

Mark the checkbox to back up your tablet's settings and other application data to Google Servers, with your Google Account. If you replace your tablet, the settings and data you've backed up are restored onto the new tablet for the first time you sign in with your Google Account. If you mark this option, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

**Back up account**

Touch to back up your account.

### Automatic restore

Mark the checkbox to restore your backed up settings or other data when you reinstall an application.

### DRM reset

Touch to delete all DRM licenses.

### Factory data reset

Reset tablet will erase all of your personal data from internal tablet storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the tablet does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you mark the checkbox - Reserve the content in internal storage before touching **Reset tablet**, any files stored on your tablet storage will not be erased. If you reset the tablet in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your tablet, there is another way to perform a factory data reset by using hardware keys. Press the **Volume up** key and the **power** key at same time until the screen lights up.

## 12.4 Accounts

Use the settings to add, remove, and manage your Email and other supported accounts. You can also use these settings to control how and whether all applications send, receive, and synchronize data on their own schedules, and whether all applications can synchronize user data automatically.



## 12.5 System

### 12.5.1 Date & time

Use Date & Time settings to customize your preferences for how date and time are displayed.

### Automatic date & time

Touch to select Use network/GPS provided time or Off.

Mark the checkbox to use network provided time or use GPS provided time.

### Automatic time zone

Mark the checkbox to use network-provided time zone. Or unmark to set all values manually.

### Set date

Touch to open a dialog where you can manually set the tablet's date.

### Set time

Touch to open a dialog where you can manually set the tablet's time.

### Select time zone

Touch to open a dialog where you can set the tablet's time zone.

### Use 24-hour format

Mark the checkbox to display the time using 24-hour clock format.

### Select date format

Touch to open a dialog where you can select the format for displaying dates.

### 12.5.2 Scheduled power on & off

Touch to set the power on & off time for every day or specified days.

### 12.5.3 Accessibility

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your tablet.

#### TalkBack

Touch to switch on/off the function. When TalkBack is on, your device provides spoken feedback to help blind and low-vision users.

#### Captions

Touch to change the caption language, text size and caption style.

#### Magnification gestures

Touch to turn on/off to activate/deactivate zoom in/out function by triple-tapping the screen.

#### Speak passwords

Mark the checkbox to speak passwords while typing.

#### Accessibility shortcut

Touch to turn on/off to enable/disable accessibility features.

#### Touch & hold delay

Touch to adjust the duration of touch and hold delay. This function enables your tablet to differ touch and touch & hold, which may avoid incorrect operations.



### 12.5.4 Developer options

To access this function, touch **Settings\About device**, then touch **Build number** 7 times. Now **Developer options** is available.

The Developer options screen contains settings that are useful for developing Android applications. For full information, including documentation of the Android applications and development tools, see the Android developer web site (http://developer.android.com).

#### Take bug report

Touch to select to collect information about your current device state and send as an email message.

#### Desktop backup password

Touch to set/change/remove desktop full backup password.

#### Stay awake

Mark the checkbox to prevent the screen from dimming and locking when the tablet is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the tablet for long periods of time, or the screen may be marked with that image.

#### USB debugging

Mark the checkbox to permit debugging tools on a computer to communicate with your tablet via a USB connection.

#### Power menu bug report

Mark the checkbox to select to include option in power menu for submitting a bug report.

### Allow mock locations

Mark the checkbox to permit a development tool on a computer to control where the tablet believes it is located, rather than using the tablet's own internal tools for this purpose.

### Select debug app

Touch to select debug app.

### Verify apps over USB

Mark the checkbox to check apps over USB.

### TV Link certification

Mark the checkbox to show options for TV Link certification.

### Show touches

Mark the checkbox to show visual feedback for touches.

### Pointer location

Mark the checkbox to show current touch data.

### Show layout bounds

Mark the checkbox to show clip bounds, margins, etc.

### Show GPU view updates

Mark the checkbox to show GPU view updates.

### Show hardware layers updates

Mark the checkbox to show hardware layers updates.



### Show GPU overdraw

Mark the checkbox to show GPU overdraw.

### Window animation scale

Touch to adjust the animation scale for your window.

### Transition animation scale

Touch to adjust the animation scale while performing transition.

### Animator duration scale

Touch to adjust the animation duration scale.

### Disable HW overlays

Mark the checkbox to select to always use GPU for screen compositing.

### Force GPU rendering

Mark the checkbox to forcely use 2D hardware acceleration in applications.

### Force 4x MSAA

Mark the checkbox to enable 4x MSAA.

### Strict mode enabled

Mark the checkbox to enable strict mode. After enabled, the screen will flash when applications do long operations on the main thread.

### Show CPU usage

Mark the checkbox to show current CPU usage.

### Profile GPU rendering

Mark the checkbox to use 2D hardware acceleration in applications.

**Enable OpenGL traces**

Touch to adjust OpenGL traces.

**Don't keep activities**

Mark the checkbox to destroy all activities as soon as you leave.

**Background process limit**

Touch to change the limit for background processes.

**Show all ANRs**

Mark the checkbox to show "Application Not Responding" dialog for background applications.

### 12.5.5 About device

This contains information about things ranging from Legal information, Model number, Firmware version, Baseband version, Kernel version, Build number to those listed below:

**System updates**

Touch to check for system updates.

**System udpates (storage)**

Touch to check for system udpates (storage).

**Status**

This contains the status of the Battery status, Battery level, SIM status, IP address, etc.

**Legal information**

Touch to view legal information.



# 13 Making the most of your tablet.....

You can download software upgrade for free from the website (www.alcatelonetouch.com).

## 13.1 Upgrade

You can use Mobile Upgrade tool or FOTA Upgrade tool to update your tablet's software.

### 13.1.1 Mobile Upgrade

Download Mobile Upgrade from ALCATEL ONETOUCH website (www.alcatelonetouch.com) and install it on your computer. Launch the tool and update your tablet by following the step by step instructions (refer to the User Guide provided together with the tool).

Your tablet's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using ONETOUCH Center before upgrading.

### 13.1.2 FOTA Upgrade

Using FOTA Upgrade tool you can update your tablet's software.

To access **System Updates**, please open **Settings\About device\ System updates**. Touch **Check for updates**, and the tablet will search for the latest software. If you want to update the system, please touch the button **Download**, after it done please touch **Install** to complete the upgrade. Now your tablet's software will have the latest version.

You should turn on data connection before searching for updates. Settings for auto-check intervals and reminders about upgrades are also available once you restart the tablet.

If you have chosen auto-check, when the system discovers the new version, the icon ⬆ will appear in the status bar. Touch the notification to access the **System Updates** directly.

During FOTA downloading or updating, to avoid errors in locating the correct update packages, do not change your default storage location.



# 14 Tablet warranty .....

Your tablet is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months [1] from the date of purchase as shown on your original invoice.

Batteries [2] and accessories sold with your tablet are also warranted against any defect which may occur during the first six (6) months [1] from the date of purchase as shown on your original invoice.

In case of any defect of your tablet which prevents you from normal use thereof, you must immediately inform your vendor and present your tablet with your proof of purchase.

If the defect is confirmed, your tablet or part thereof will be either replaced or repaired, as appropriate. Repaired tablet and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

[1] The warranty period may vary depending on your country.

[2] The life of a rechargeable tablet battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your tablet during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your tablet and/or accessory due to (without any limitation):

1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your tablet is used,

2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,

3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,

4) Modification, adjustment or alteration of software or hardware performed by individuals not authorized by TCT Mobile Limited,

5) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation…

Your tablet will not be repaired in cases where labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law.

Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.



# 15 Accessories .....

The latest generation of ALCATEL ONETOUCH tablets offers a built-in handsfree feature that allows you to use the tablet from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

1. Charger

2. USB cable

3. Stereo headset

Only use your tablet with the ALCATEL ONETOUCH, chargers and accessories in your box.

# 16 Troubleshooting.....

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge ( ) the battery for optimal operation.
- Avoid storing large amounts of data in your tablet as this may affect its performance.
- Use **Factory date reset** and the upgrade tool to perform tablet formatting or software upgrading (to reset factory data, hold down the **Power** key and the **Volume up** key at the same time). ALL User tablet data: contacts, photos, messages and files, downloaded applications will be lost permanently. It is strongly advised to fully backup the tablet data and profile via Android Manager before doing formatting and upgrading.

and carry out the following checks:

**My tablet cannot be switched on or is frozen**

- When the tablet cannot be switched on, charge for at least 20 minutes to ensure the minimum battery power needed, then try to switch on again.
- When the tablet falls into a loop during power on-off animation and the user interface cannot be accessed, press and hold the **Volume down** key to enter Safe Mode. This eliminates any abnormal OS booting issues caused by 3rd party APKs.
- If neither method is effective, please reset the tablet using the **Power** key and the **Volume up** key (holding both together).

**My tablet has not responded for several minutes**

- Restart your tablet by pressing and holding the **Power** key.



**My tablet turns off by itself**

- Check that your screen is locked when you are not using your tablet, and make sure the **Power** key is not mis-contacted due to unlocked screen.
- Check the battery charge level.

**My tablet cannot charge properly**

- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.

**My tablet cannot connect to a network or "No service" is displayed**

- Try connecting in another location.
- Verify the network coverage with your operator.
- Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually (see "**12.1.7 Mobile networks**")
- Try connecting at a later time if the network is overloaded.

**My tablet cannot connect to the Internet**

- Check that the IMEI number (press *#06#) is the same as the one printed on your warranty card or box.
- Make sure that the internet access service of your SIM card is available.
- Check your tablet's Internet connecting settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

**Invalid SIM card**

- Make sure the SIM card has been correctly inserted (see "Inserting or removing the SIM card").
- Make sure the chip on your SIM card is not damaged or scratched.
- Make sure the service of your SIM card is available.

**Unable to make outgoing calls**

- Make sure you have dialed a valid number and have touched **Call**.
- For international calls, check the country and area codes.
- Make sure your tablet is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not barred outgoing calls.
- Make sure that your tablet is not in airplane mode.

**Unable to receive incoming calls**

- Make sure your tablet is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your tablet is not in airplane mode.

**The caller's name/number does not appear when a call is received**

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

**I cannot find my contacts**

- Make sure your SIM card is not broken.
- Make sure your SIM card is inserted properly.
- Import all contacts stored in SIM card to tablet.

**The sound quality of the calls is poor**

- You can adjust the volume during a call by pressing the **Volume Up/ Down** key.
- Check the network strength .
- Make sure that the receiver, connector or speaker on your tablet is clean.



**I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an ALCATEL ONETOUCH accessory.

**When I select a number from my contacts, the number cannot be dialed**

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

**I am unable to add a contact in my contacts**

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories).

**My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability.

**I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

**I am unable to send and receive MMS**

- Check your tablet memory availability as it might be full.
- Contact your network operator to check service availability and check MMS parameters (see "**5.1.3 Adjust message settings**").
- Verify the server centre number or your MMS profile with your operator.
- The server centre may be swamped, try again later.

**SIM card PIN locked**

- Contact your network operator to obtain the PUK code (Personal Unblocking Key).

**I am unable to connect my tablet to my computer**

- Install ALCATEL ONETOUCH Center.
- Check that your USB driver is installed properly.

- Open the Notification panel to check if the Android Manager Agent has been activated.
- Check that you have marked the checkbox of USB debugging.
  To access this function, touch **Settings\About device**, then touch **Build number** for 7 times. Now you may touch **Settings\USB debugging\ USB debugging**.
- Check that your computer meets the requirements for ALCATEL ONETOUCH Center Installation.
- Make sure that you're using the right cable from the box.

**I am unable to download new files**

- Make sure there is sufficient tablet memory for your download.
- Check your subscription status with your operator.

**The tablet cannot be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your tablet is visible to other users (see "**7.3 Connecting to Bluetooth devices**").
- Make sure that the two devices are within Bluetooth's detection range.

**How to make your battery last longer**

- Make sure you follow the complete charge time (minimum 2.5 hours).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

**The tablet will become warm following prolonged calls, game playing, internet surfing or running other complex applications.**

- This heating is a normal consequence of the CPU handling excessive data. Ending above actions will make your tablet return to normal temperatures.



# 17 Specifications .....

| | |
|---|---|
| **Processor** | MTK MT8392+MTK MT6290 |
| **Platform** | Android™ 4.4 |
| **Memory** | 2G RAM + 16G ROM |
| **Dimensions (LxWxT)** | 209 x 122 x 7.55mm |
| **Weight** | 330 grams with battery |
| **Display** | 8-inch IPS touchscreen with 1920 x 1200 |
| **Network** | GSM:<br>Quad-band 850/900/1800/1900 MHz<br>UMTS:<br>Quad-band 850/900/1900/2100 MHz<br>LTE:<br>CSFB B1/B3/B7/B8/B20<br>(Band frequency and data speed are operator dependent.) |
| **GPS** | Assisted GPS/Internal GPS antenna |
| **Connectivity** | • Bluetooth V4.0<br>• Wi-Fi IEEE 802.11 a/b/g/n<br>• 3.5 mm audio jack<br>• micro-USB |
| **Camera** | • 5 MPxl back camera<br>• 2 Mpxl front camera |

| | |
|---|---|
| **Audio supported formats** | MP3, MP2, AMR, MIDI, Vorbis, APE, AAC, AAC+, FLAC |
| **Video supported formats** | H.265, H.264, H.263, MPEG-4, XVID, VP8, VC-1, MKV, MOV, MEPG, AVI |
| **Battery** [1] | • Rechargeable Lithium-ion battery<br>• Capacity: 4060mAh |
| **Expansion Slot** | microSD™ memory card<br>(Availability of microSD card depends on market) |
| **Special Features** | • G-sensor<br>• Light Sensor<br>• E-compass<br>• IrDA |

**Note:** Specifications are subject to change without prior notice.

[1] The original battery has undergone rigorous safety inspections to meet qualification standards, the use of non-original batteries may be dangerous.



ALCATEL is a trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

© Copyright 2014 TCT Mobile Limited
All rights reserved

TCT Mobile Limited reserves
the right to alter material
or technical specification
without prior notice.

All "Signature" ringtones embedded in this tablet have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).